

# CV 100

TV Fernbedienung  
TV Remote Control ("Zapper")  
Télécommande TV

3

TV Remote Contorl ("Zapper")

A

ACME	003									
ADA	005									
ADC	005	<b>098</b>								
ACURA	009									
ADMIRAL	000	001	002	019	<b>049</b>	053				
ADYSON	003									
AGAZI	002									
AGB	123									
AIKO	004	003	009							
AIWA	087									
AKAI	006	008	<b>009</b>	010	011	051	068	<b>069</b>	070	169
AKIBA	011									
AKITO	025									
A K U R A	002	011	015	071						
ALBA	003	009	011	027	028	053	068	086	162	169
ALBIRAL	037									
ALKOS	050									
ALLORGAN	020	026								
ALLSTAR	051									
AMPLIVISION	003									
AMSTRAD	002	009	011	013	068	069	071	074	085	123
ANAM	009	065	109							
ANGLO	009									
ANITECH	002	009	015	043	109					
<b>ANSONIC</b>	009	014								
<b>ARCAM DELTA</b>	003	003								
<b>ARC EN CIEL</b>	<b>045</b>	<b>126</b>	150							
<b>ARISTONA</b>	015	051	159	169						
ARTHUR MARTIN	158									
ASA	WO	016	017	018	049	110				
ASBERG	043	051								
ASTRA	009									
ASUKA	002	003	011							
ATLANTIC	003	020	021	051	169					
ATORI	009									
AUDIOSONIC	003	009	011	020	051	139	169			
AUDIOTON	003									
AUSIND	043									
AUTOVOX	000	002	003	020	043	057	125			

B

BAIRD	139									
BANG & OLUFSON	000									
BARCO	112									
BASIC LINE	009	011	051							

TV Remote Contorl ("Zapper")

BASTIDE	003									
BAUR	058	118	169							
BEKO	007	083								
BEON	051	169								
BEST	113	114								
BESTAR	051	115								
BINATONE	003									
BLACK STAR	129									
BLAUPUNKT	008	098	099	100	117	119				
BLUE SKY	011									
BLUE STAR	120									
BONDSTEC	129									
BOOTS	003	025								
BPL	120									
BRANDT	022	036	045	046	126	127	139	150		
BRION VEGA	WO	051	057	169						
<b>BRITANNIA</b>	003									
BRUNS	WO	039								
BSR	026									
BTC	011									
BUSH	009	011	019	024	025	027	028	051	068	084
	115	120	139	167	169					

C

CAPSONIC	002									
<b>CARREFOUR</b>	027									
<b>CASCADE</b>	009									
CATHAY	051	169								
CENTURION	051	169								
CENTURY	WO									
CGE	043	053	129							
<b>CIMLINE</b>	009	028								
CINERAL	175									
CITY	009									
<b>CLARIVOX</b>	037	039	169							
<b>CLATRONIC</b>	002	003	009	<b>011</b>	030	043	051	083	129	
CONCORDE	009									
<b>CONDOR</b>	003	021	051	083						
CONTEC	003	009	027	029	030					
CONTINENTAL EDISON	022	036	045	046	126	139	150			
COSMEL	009									
CROSLEY	WO	043	094	097	129					
CROWN	009	043	051	053	083	114	121	169		
CRYSTAL	122									
CS ELECTRONICS	003	011	129							
CTC	129									

TV Remote Control ("Zapper")

TV Remote Control ("Zapper")

CTC CLATRONIC	014									
CYBERTRON	011									
D										
DAEWOO	003	003	009	051	115					
DAINICHI	011									
DANSAI	002	051	169							
DATSURA	121									
DAYTON	009									
DE GRAAF	006	019	033							
DECCA	003	010	025	032	051	092	123	154	169	
DESMET	051	169								
DIXI	009	039	051	169						
DTS	009									
DUAL	003	034	089	125	126	139	160			
DUAL-TEC	003	009	034							
DUMONT	WO	003	014	017	018					
DYNATRON	051	169								
E										
ELBE	034	037								
ELCIT	000									
ELECTRO TECH	009									
ELECTA	120									
ELIN	003	016	018	051	169					
ELITE	011	021	051							
ELMAN	014									
ELTA	009									
EMERSON	000	127								
ERRES	015	051	169							
ETRON	009									
EURO-FEEL	002									
EU ROMANN	002	003	003	051	114					
EUROPHON	003	014	025	051	072	123				
EXPERT	020									
F										
FENNER	009	115								
FERGUSON	035	036	037	060	061	095	127	Pr69		
FIDELITY	003	019	060	068	096					
FINLANDIA	006	019	110	128						
FINLUX	w o	010	014	016	017	018	043	051	110	123
	157	167	169							
FIRST LINE	003	003	009	026	051	062	129			
FISHER	WO	003	006	018	027	029	039	040	083	090
FLINT	051	148								
FORGESTONE	060									
FORMENTI	w o	001	003	021	169					

FORTRESS	000	001								
FRONTECH	002	009	019	049	068	118	122	129		
FUJITSU	010	020								
FUNAI	002	026								
G										
GALAXI	053	083								
GBC	009	027								
GEC	003	010	041	049	051	123	169			
GELOSO	009	019								
GENERALTECHNIC	009									
GENEXXA	011	049	051							
GOLDSTAR	003	003	009	012	019	051	093	129	169	
GOODMANS	002	009	010	027	028	042	051	068	093	
	115	153	169	171						
GORENJE	083	114								
GPM	011									
G RAETZ	049	142								
GRANADA	003	006	010	019	027	031	040	043	051	
054	058	064	123	127	128	169				
	009	011	120	169						
GRUNDIG	008	017	043	091	117	136				
H										
HALIFAX		003								
HAMPTON	003	003								
HANSEATIC	003	009	021	026	027	051	073	118	169	
HANTAREX	009	123								
HCM	002	003	009	074	120					
HIFIVOX	150									
HINARI	006	009	011	027	043	051	137	169		
HISAWA	011	120	148							
HITACHI	003	010	016	019	023	027	033	041	045	
046	047	048	049	118	123	139	142			
HOSHAI	011									
HORNYPHON	051									
HUANYU	003	115								
HYGASHI	003	003								
HYPER	003	003	009	129						
HYPSON	002	003	051	120	169					
I										
ICE	002	003	009	011	051	068				
IMPERIAL	043	049	051	053	083	129				
INDESIT	024									
INDIANA	051	169								
INGELEN	049									
INGERSOL	009									

TV Remote Contorl ("Zapper")

TV Remote Contorl ("Zapper")

INNO HIT	003	009	010	011	051	058	093	123	140	169
<b>INTERBUY</b>	009	109	129							
INTERFUNK	w o	015	049	051	129	139	150	169		
<b>INTERVISION</b>	002	003	014	109						
IRRADIO	009	011	051	068	169					
<b>ISUKAI</b>	011									
<b>ITC</b>	003									
ITS	011	051	068	120						
III	009	049	061	142	143					
J										
JEC	050									
JVC	027	051	052	068	081	144	145			
K										
KAISUI	003	003	009	011	120					
KAMOSONIC	003									
KAMP	003									
KAPSCH	020	049								
KARCHER	003	003	009	016	037	169				
KENDO	014	019	028							
KENNEDY	020									
<b>KINGSLEY</b>	003									
KNEISSEL	034	174								
KOLSTER	051									
KONKA	011									
KORPEL	051	169								
<b>KORTING</b>	000	021								
<b>KOYODA</b>	009									
KTV	003									
KURO	121									
KYOTO	037									
L										
LENCO	009									
LENOIR	003	009								
LESA	129									
LEYCO	002	MO	026	051	169					
LIESENK	169									
LIFETEC	002	009								
LOEWE OPTA	am	051	169							
LOGIK	030									
LUMA	019	020	051	169						
LUX MAY	051									
LUXOR	003	019	047	093						
M										
M-ELECTRONIC	003	009	016	018	036	049	051	068	090	109
	110	115	139	169						

MAGNADYNE	000	014	123	129	169					
MAGNAFON	003	014	043	072	123					
MANDOR	002									
MANESTH	002	003	021	028	051	169				
MARANTZ	051	169								
MARELLI	WO									
MARK	051	169								
MATSUI	003	004	009	010	013	019	025	026	027	028
	030	050	051	068	084	085	091	123	147	148
	169	173								
MATSUSHITA	065									
MCMICHAEL	041									
MEDIATOR	015	051	169							
MEMOREX	009									
MEMPHIS	009	010	113							
METZ	000	075	080	151	152					
MINERVA	017									
MINOKA	051									
MITSUBISHI	w o	027	051	054	055	085				
MIVAR	003	043	073	093	123	140				
MOTION	043									
MULTI SYSTEM	169									
<b>MULTITECH</b>	003	003	009	014	019	027	043	045	129	169
MURPHY	003	018								
N										
NAONIS	019									
NATIONAL	064									
NEC	027	056								
NECKERMANN	OW	003	008	019	051	083	098	099	118	169
NEI	051	068	113	122	169					
NESCO	129									
<b>NEWTECH</b>	009	051								
<b>NEWWORLD</b>	011									
<b>NICALAGIC</b>	ca3									
<b>NIKKAI</b>	002	003	010	011	050	051	113	169		
<b>NOBLIKO</b>	003	014	017	043						
<b>NOGAMATIC</b>	150									
<b>NOKIA</b>	049	061	142	143						
<b>NORDMENDE</b>	024	036	045	046	049	051	057	059	126	127
	139	150								
O										
OCEANIC	049	142								
OKANO	083									
ONCEAS	003									
ONWA	069									

TV Remote Contorl ("Zapper")

ORBIT	051									
ORION	009	013	021	026	028	030	051	060	062	075
	084	123	147	169						
OSAKI	002	003	004	010	011	042	063	074		
OSO	011									
OSUME	010	029								
OTTOVERSAND	001	003	008	021	027	051	058	118	120	121
	139	169								
P										
PAEL	003									
PALLADIUM	003	012	083							
PANAMA	002	003	003	009	063					
PANASONIC	049	064	065	066	124	142	151	152		
PATHE CINEMA	003	021	037	073						
PATHE MARCONI	022	037	045	046	126	150				
PAUSA	009									
PERDIO	004	010	021							
PHILCO	w o	043	053	129						
PHILHARMONIC	003	063								
PHILIPS	000	003	015	038	041	043	051	058	060	172
	089	115	155	166	169					
PHOENIX	000	051	169							
PHONOLA	000	015	051	058	169					
PIONEER	036	049	051	139	169					
PLANTRON	002	051								
POPPY	am									
PRANDONI-PRINCE	019	123								
PRECISION	003	063								
PRIMA	009	049								
PRINZ	047									
PROFEX	009	043								
PROFI-TRONIC	051									
PROLINE	010	015	051	062						
PROTECH	002	003	009	014	051	063	113	122	129	169
PYE	015	051	068	169						
PYMI	009									
Q										
QUASAR	129									
QUELLE	002	003	016	017	018	026	030	051	094	098
	099	129	169							
QUESTA	027									
R										
RADIOLA	015	038	051	058	169					
RADIOTONE	051									
RADIOMARELLI	WO	123	129							

TV Remote Contorl ("Zapper")

RADIONETTE	016	018								
RANK	017	027								
RBM	017									
RCA	031									
REVOX	051	169								
REX	002	019	020	034	049	157				
RFT	WO	039								
R-LINE	051	169								
ROADSTAR	002	009	011							
ROBOTRON	WO									
RTF	WO									
S										
SABA	WO	036	045	046	049	059	123	126	127	139
	142	150								
SACCS	037									
SAIKOU	042									
SAISHO	002	003	009	013	028	030	060	123	106	
SALORA	019	047	049	093	118	121	128			
SAMBERS	014	043	072	123	140					
SAMSUNG	002	003	009	010	030	051	058	063	083	093
	104	105	140	160	169	172				
SANDRA	003									
SANSUI	051									
SANYO	003	003	006	010	016	018	027	029	030	031
	039	040	043	073	127	160				
SBR	015	041	060	169						
SCHAUB LORENZ	049	142								
SCHNEIDER	003	003	011	034	038	051	058	068	090	125
	129	139	160	169						
SEG	002	003	014	027	039	043	129			
SEI-SYNUDYNE	WO	013	014	026	049	075	123			
SELECO	019	020	027	034	049	157				
SENCORA	009									
SENTRA	050									
SHARP	001	027	029	190						
SHORAI	026									
SIAREM	WO	014	123							
SICATEL	037									
SIEMENS	008	029	098	099	117					
SIERRA	015	051								
SIESTA	160									
SILVER	027									
SINGER	WO	014	129							
SINUDYNE	WO	013	014	026	028	075	169			
SKANTIC	049									
SOGERA	021									

TV Remote Control ("Zapper")

so LAVOX	049									
SONITRON	006									
SONOKO	002	003	009	051	169					
SONOLOR	006	049								
SONTEC	051	160	169							
SONY	009	010	027	030	063	077	127			
SOUND & VISION	011	014								
SOUNDWAVE	051	169								
STANDARD	003	009	011	021	051	063				
STENWAY	120									
STERN	019	020	034	049						
SUNKAI	026	062	084							
SUNWOOD	009	051								
SUPERLA	003									
SUPERTECH	118									
SUPRA	009									
SUSUMU	011									
SUTRON	009									
SYDNEY	003	003	063							
SYSLINE	189									
<b>T</b>	<b>080</b>									
TANDBERG	001	003	010	011	048	049	063			
TANDY	003	019	027	041	056	063	128			
TASHIKO	003	010	025	032	051	063	092	123	169	
TATUNG	003	009	048	063	129					
TEC	065									
TECHNICS	039									
TECHNISAT	021									
TECNEMA	022	036	045	059	126	139	150			
TELEAVIA	035	036	051	078	079	094	126	127	139	150
TELEFUNKEN	163									
TELEMEISTER	021									
TELETECH	009	113	129							
TELETON	003	020	063	080	118					
TELEVIDEON	021									
TENSAI	009	011	018	021	026	051				
TESMET	051									
TEXET	003	003	063							
THOMSON	003	022	036	045	046	051	059	126	127	139
	150	163	166							
THORN	010	018	035	037	050	054	058	060	081	127
	169									
TOKAI	010	051								
TOKYO	003									

TV Remote Control ("Zapper")

TOMASHI	120									
TOSHIBA	017	027	050	082						
TOWADA	049									
TRIDENT	063									
TRIUMPH	013	082	123							
<b>U</b>										
UHER	020	021	043	049	051					
ULTRAVOX	WO	003	014	129						
UNIVERSUM	002	016	018	051	083	110	114	129	169	
UNIVOX	037									
<b>V</b>										
VESTEL	049	051	169							
VEXA	009	169								
VICTOR	027	051	065							
VIDELOGIQUE	003	011								
VIDEOSAT	129									
VIDEO SYSTEM	051									
VISIOLA	003									
VISION	021	051								
VISOREX	096									
VISTAR	048									
VORTEC	051	169								
VOXSON	wo	019	043	049	051					
<b>W</b>										
WALTHAM	003	037	048	063						
WATSON	021	051	169							
WATT RADIO	003	014	037							
WEGA	000	027								
WELTBlick	051	169								
WESTON										
WHITE WESTINGHOUSE	003	014	021	043	169					
<b>Y</b>										
YOKO	002	003	009	011	051	063	122	169		
YORX	011									
<b>Z</b>										
ZANUSSI	019	020								