

D-Link™ DGS-1248T

WebSmart 48-Port 10/100/1000Mbps + 4
Combo SFP(Mini GBIC) Gigabit Switch

Manual

First Edition

D-Link®

Building Networks for People



RECYCLABLE

Information in this document is subject to change without notice.

© 2004 D-Link Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of D-Link Computer Corporation is strictly forbidden.

Trademarks used in this text: D-Link and the D-LINK logo are trademarks of D-Link Computer Corporation; Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. D-Link Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Warnung!

Dies ist ein Produkt der Klasse A. Im Wohnbereich kann dieses Produkt Funkstörungen verursachen. In diesem Fall kann vom Benutzer verlangt werden, angemessene Massnahmen zu ergreifen.

Precaución!

Este es un producto de Clase A. En un entorno doméstico, puede causar interferencias de radio, en cuyo caso, puede requerirse al usuario para que adopte las medidas adecuadas.

Attention!

Ceci est un produit de classe A. Dans un environnement domestique, ce produit pourrait causer des interférences radio, auquel cas l'utilisateur devrait prendre les mesures adéquates.

Attenzione!

Il presente prodotto appartiene alla classe A. Se utilizzato in ambiente domestico il prodotto può causare interferenze radio, nel cui caso è possibile che l'utente debba assumere provvedimenti adeguati.

VCCI Warning

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

TABLE OF CONTENT

About This Manual	1
Purpose	1
Terms/Usage	1
Introduction.....	2
Gigabit Ethernet Technology.....	2
Fast Ethernet Technology	3
Switching Technology	3
VLAN (Virtual Local Area Network).....	4
Features.....	4
Unpacking and Installation	6
Unpacking.....	6
Installation	6
Rack Mounting	7
Connecting Network Cable.....	8
AC Power.....	8
Identifying External Components	9
Front Panel.....	9
Rear Panel	10
Understanding LED Indicators	11
Power and System LEDs	11
Ports 1~48 Status LEDs	11
mini-GBIC Port 45F ~ 48F LEDs.....	12
Configuration.....	13
Installing the Web Management Utility.....	13
Discovery List.....	14
Monitor List.....	14
Device Setting.....	16

Toolbar.....	17
Configuring the Switch.....	18
Login.....	18
Setup Menu.....	20
Configuring Setup Setting.....	21
Port Settings.....	21
VLAN Settings (Virtual Local Area Network).....	23
Trunk Setting.....	25
Mirror Setting.....	27
Device Status.....	27
Statistics.....	28
System Setting.....	31
Trap Setting.....	31
Password Setting.....	32
Backup Setting.....	32
Reset Setting.....	33
Logout.....	33

ABOUT THIS MANUAL

Congratulations on your purchase of the DGS-1248T Web Smart 48-Port 10/100/1000Mbps Gigabit Switch. This device integrates 1000Mbps Gigabit Ethernet, 100Mbps Fast Ethernet, and 10Mbps Ethernet network capabilities in a highly flexible package.

Purpose

This manual discusses how to install your 48-Port 10/100/1000Mbps Gigabit Web Smart Switch.

Terms/Usage

In this manual, the term “Switch” (first letter upper case) refers to your Web Smart Switch, and “switch” (first letter lower case) refers to other Ethernet switches.

INTRODUCTION

This chapter describes the features of the DGS-1248T Web Smart 48-Port 10/100/1000Mbps Gigabit Switch and some background information about Ethernet/Fast Ethernet/Gigabit Ethernet switching technology.

Gigabit Ethernet Technology

Gigabit Ethernet is an extension of IEEE 802.3 Ethernet utilizing the same packet structure, format, and support for CSMA/CD protocol, full-duplex, flow control, and management objects, but with a tenfold increase in theoretical throughput over 100-Mbps Fast Ethernet and a hundredfold increase over 10-Mbps Ethernet. Since it is compatible with all 10-Mbps and 100-Mbps Ethernet environments, Gigabit Ethernet provides a straightforward upgrade without wasting a company's existing investment in hardware, software, and trained personnel.

The increased speed and extra bandwidth offered by Gigabit Ethernet are essential to coping with the network bottlenecks that frequently develop as computers and their busses get faster and more users use applications that generate more traffic. Upgrading key components, such as your backbone and servers to Gigabit Ethernet can greatly improve network response times as well as significantly speed up the traffic between your subnets.

Gigabit Ethernet enables fast optical fiber connections to support video conferencing, complex imaging, and similar data-intensive applications. Likewise, since data transfers occur 10 times faster than Fast Ethernet, servers outfitted with Gigabit Ethernet NIC's are able to perform 10 times the number of operations in the same amount of time.

In addition, the phenomenal bandwidth delivered by Gigabit Ethernet is the most cost-effective method to take advantage of today and tomorrow's rapidly improving switching and routing internetworking technologies. And with expected advances in the coming years in silicon technology and digital signal processing that will enable Gigabit Ethernet to eventually operate over unshielded twisted-pair (UTP) cabling, outfitting your network with a powerful 1000-Mbps-capable backbone/server connection creates a flexible foundation for the next generation of network technology products.

Fast Ethernet Technology

The growing importance of LANs and the increasing complexity of desktop computing applications are fueling the need for high performance networks. A number of high-speed LAN technologies have been proposed to provide greater bandwidth and improve client/server response times. Among them, 100BASE-T (Fast Ethernet) provides a non-disruptive, smooth evolution from the current 10BASE-T technology. The non-disruptive and smooth evolution nature, and the dominating potential market base, virtually guarantees cost-effective and high performance Fast Ethernet solutions.

100Mbps Fast Ethernet is a standard specified by the IEEE 802.3 LAN committee. It is an extension of the 10Mbps Ethernet standard with the ability to transmit and receive data at 100Mbps, while maintaining the CSMA/CD Ethernet protocol. Since the 100Mbps Fast Ethernet is compatible with all other 10Mbps Ethernet environments, it provides a straightforward upgrade and takes advantage of the existing investment in hardware, software, and personnel training.

Switching Technology

Another approach to pushing beyond the limits of Ethernet technology is the development of switching technology. A switch bridges Ethernet packets at the MAC address level of the Ethernet protocol transmitting among connected Ethernet or Fast Ethernet LAN segments.

Switching is a cost-effective way of increasing the total network capacity available to users on a local area network. A switch increases capacity and decreases network loading by dividing a local area network into different segments, which do not compete with each other for network transmission capacity.

The switch acts as a high-speed selective bridge between the individual segments. The switch, without interfering with any other segments, automatically forwards traffic that needs to go from one segment to another. By doing this the total network capacity is multiplied, while still maintaining the same network cabling and adapter cards.

Switching LAN technology is a marked improvement over the previous generation of network bridges, which were characterized by higher latencies. Routers have also been used to segment local area networks, but the cost of a router, the setup, and maintenance required make routers relatively impractical. Today switches are an ideal solution to most kinds of local area network congestion problems.

VLAN (Virtual Local Area Network)

A VLAN is a group of end-stations that are not constrained by their physical location and can communicate as if a common broadcast domain, a LAN. The primary utility of using VLAN is to reduce latency and need for routers, using faster switching instead. Other VLAN utility includes:

Security: Security is increased with the reduction of opportunity in eavesdropping on a broadcast network because data will be switched to only those confidential users within the VLAN.

Cost Reduction: VLANs can be used to create multiple broadcast domains, thus eliminating the need of expensive routers.

Features

- ◆ 48×10/100/1000Mbps Auto-negotiation Gigabit Ethernet ports
- ◆ 4 x 1000Mbps SFP(Mini GBIC) (Auto-Sense) for optional SFP(Mini GBIC) transceiver to extend distance, share with 4 1000BASE-T ports
- ◆ All RJ-45 ports support auto MDI/MDIX, so there is no need to use cross-over cables or an up-link port
- ◆ Half-duplex transfer mode for connection speed 10Mbps and 100Mbps
- ◆ Full-duplex transfer mode for connection speed of 10Mbps, 100Mbps, and 1000Mbps

- ◆ Wire speed reception and transmission
- ◆ Store-and-Forward switching scheme capability to support rate adaptation and ensure data integrity
- ◆ Up to 8K unicast addresses entities per device, self-learning, and table aging
- ◆ 1632KBytes packet buffer
- ◆ Supports IEEE 802.3x flow control for full-duplex mode ports
- ◆ Supports 802.1Q VLAN
- ◆ Supports Port-base QoS, 802.1p QoS
- ◆ Supports Trunk
- ◆ Supports Port-mirroring
- ◆ Supports Port-setting for Speed/Disable, Flow control
- ◆ Easy configuration via Web Browser
- ◆ Easy setting via Web Management Utility
- ◆ Standard 19" Rack-mount size

UNPACKING AND INSTALLATION

This chapter provides unpacking and installation information for the Switch.

Unpacking

Open the shipping cartons of the Switch and carefully unpacks its contents. The carton should contain the following items:

- ◆ One DGS-1248T Web Smart 48-Port 10/100/1000Mbps Gigabit Switch
- ◆ One AC power cord, suitable for your area's electrical power connections
- ◆ Four rubber feet to be used for shock cushioning
- ◆ Screws and two mounting brackets
- ◆ CD-ROM with Web Management Utility and Manual

If any item is found missing or damaged, please contact your local reseller for replacement.

Installation

The site where you install the hub stack may greatly affect its performance. When installing, consider the following pointers:

Install the Switch in a fairly cool and dry place. See *Technical Specifications* for the acceptable temperature and humidity operating ranges.

Install the Switch in a site free from strong electromagnetic field generators (such as motors), vibration, dust, and direct exposure to sunlight.

Leave at least 10cm of space at the front and rear of the hub for ventilation.

Install the Switch on a sturdy, level surface that can support its weight, or in an EIA standard-size equipment rack. For information on rack installation, see the next section, Rack Mounting.

When installing the Switch on a level surface, attach the rubber feet to the bottom of each device. The rubber feet cushion the hub and protect the hub case from scratching.

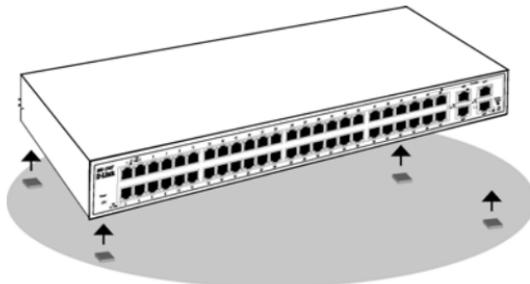


Figure 1. Attach the adhesive rubber pads to the bottom

Rack Mounting

The Switch can be mounted in an EIA standard-size, 19-inch rack, which can be placed in a wiring closet with other equipment. Attach the mounting brackets at the Switch's front panel (one on each side), and secure them with the provided screws.

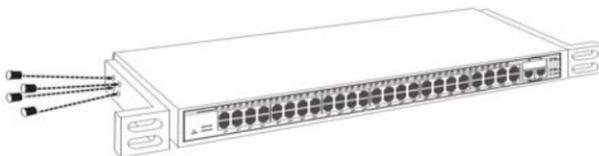


Figure 2. Combine the Switch with the provided screws

Then, use screws provided with the equipment rack to mount each Switch in the rack.

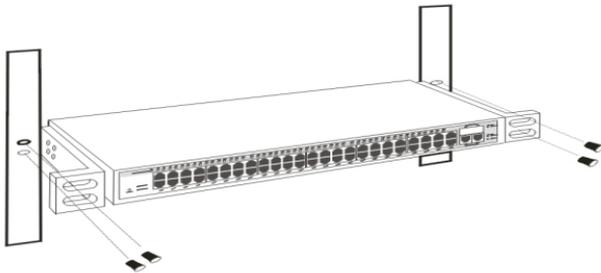


Figure 3. Mount the Switch in the rack

Connecting Network Cable

The Switch supports 1000Mbps Gigabit Ethernet that runs in Auto-negotiation mode and 10Mbps Ethernet or 100Mbps Fast Ethernet that runs both in half- and full-duplex mode and 1000Mbps Gigabit Ethernet runs in full-duplex mode using four pair of Category 5 Cable.

These RJ-45 ports are Auto-MDI type port. The Switch can auto transform to MDI-II or MDI-X type, so you can just make an easy connection that without worrying if you are using a standard or crossover RJ45 cable.

There are 4 additional SFP/mini-GBIC slots for optional SFP/mini-GBIC modules.

AC Power

The Switch uses the AC power supply 100-240V AC, 50-60 Hz. The power switch is located at the rear of the unit adjacent to the AC power connector and the system fan. The Switch's power supply will adjust to the local power source automatically and may be turned on without having any or all LAN segment cables connected.

IDENTIFYING EXTERNAL COMPONENTS

This chapter describes the front panel, rear panel, and LED indicators of the Switch.

Front Panel

The figure below shows the front panels of the Switch.

10/100/1000 Base-T Twisted-Pair Ports w/ LED Indicators

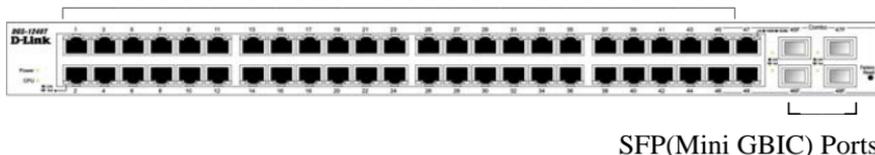


Figure 4. Front panel of 48-Port Gigabit Ethernet Switch

LED Indicator:

Comprehensive LED indicators display the status of the Switch and the network (see the LED Indicators chapter below).

1000BASE-T Twisted Pair Ports (Port 1~48)

The DGS-1248T is equipped with forty-eight Gigabit twisted pair ports that are auto negotiable 10/100/1000Mbps and also support auto MDI/MDIX crossover detection. These ports can operate in half- and full-duplex modes.

SFP(Mini GBIC) Ports (Option Port 45~48)

The Switch is equipped with Four SFP(Mini GBIC) ports, supporting optional 1000BASE-X SFP(Mini GBIC) transceivers.

Note: When the port is set to “Forced Mode”, Auto MDI/MDIX will be disabled.

Reset:

The Reset button is used to reset all settings back to the factory defaults.

Note: Be sure that you record the settings of your device, or else all settings will be erased when pressing the “Reset” button.

Rear Panel



Figure 5. Rear panel of the Switch

AC Power Connector:

This is a three-pronged connector that supports the power cord. Plug in the female connector of the provided power cord into this connector, and the male into a power outlet. Supported input voltages range from 100-240V AC at 50-60Hz.

UNDERSTANDING LED INDICATORS

The front panel LEDs provides instant status feedback, and helps monitor and troubleshoot when needed.

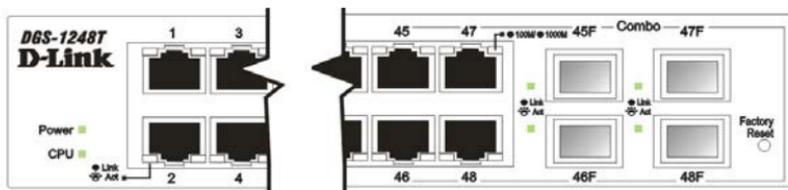


Figure 6. LED indicators of the Switch

Power and System LEDs

POWER: System Power Indicator

On	:	When the Power LED lights on, the Switch is receiving power.
Off	:	When the Power turns off or the power cord has an improper connection.

CPU: Management Indicator

Blinking	:	When the CPU is working, the CPU LED is blinking.
On/Off	:	The CPU is not working.

Ports 1~48 Status LEDs

Link/ACT: Link/Activity

On	:	When the Link/ACT LED lights on, the respective port is successfully connected to an Ethernet network.
Blinking	:	When the Link/ACT LED is blinking, the port is transmitting or receiving data on the Ethernet network.
Off	:	There is no link.

Speed:

Green	:	When the Speed LED lights green, the respective port is connected to a 1000Mbps Gigabit Ethernet network.
Amber	:	When the Speed LED lights amber, the respective port is connected to a 100Mbps Fast Ethernet network.
Off	:	When the Speed LED lights off, the respective port is connected to a 10Mbps Fast Ethernet network.

mini-GBIC Port 45F ~ 48F LEDs

Link/ACT:

On	:	When the mini-GBIC module is installed and connected to a network, the Link LED lights on.
Blinking	:	When the LED is blinking, the port is transmitting or receiving data on the network.
Off	:	No mini-GBIC module is installed or connected to a network.

CONFIGURATION

Through the Web Browser you can configure the Switch functions such as VLAN, Trunking, QoS... etc.

With the attached Web Management Utility, you can easily discover all Web Managed Switches, assign the IP Address, change the password, and upgrade with new firmware.

Installing the Web Management Utility

The following provides instructions guiding you through the installations of the Web Management utility.

1. **Insert the Utility CD in the CD-ROM Drive.**
2. **From the Start menu on the Windows desktop, choose Run.**
3. **In the Run dialog box, type D:\Web Management Utility\setup.exe (D:\ depends where your CD-ROM drive is located) and click OK.**
4. **Follow the on-screen instructions to install the utility.**
5. **Upon completion, go to Program Files -> web_management_utility and execute the Web Management utility. (Figure 7.)**

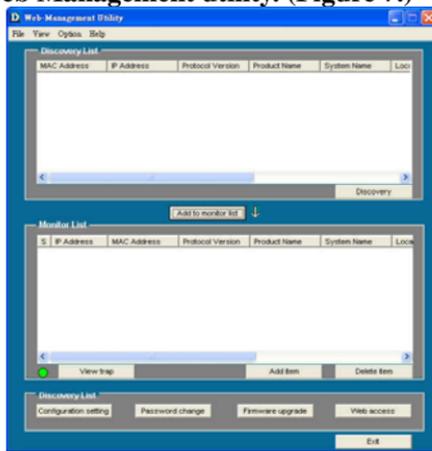


Figure 7. Web Management Utility

The Web Management Utility was divided into four parts, *Discovery List*, *Monitor List*, *Device Setting*, and *Toolbar function*, for detailed instructions, follow the section below.

Discovery List

This is the list where you can discover all the Web managed devices in the entire network.

By pressing the “*Discovery*” button, you can list all the Web Managed devices in the discovery list.

Double click or press the “*Add to monitor list*” button to select a device from the Discovery List to the Monitor List.

System word definitions in the Discovery List:

- **MAC Address:** Shows the device MAC Address.
- **IP Address:** Shows the current IP address of the device.
- **Protocol version:** Shows the version of the Utility protocol.
- **Product Name:** Shows the device product name.
- **System Name:** Shows the appointed device system name.
- **Location:** Shows where the device is located.
- **Trap IP:** Shows the IP where the Trap is to be sent.
- **Subnet Mask:** Shows the Subnet Mask set of the device.
- **Gateway:** Shows the Gateway set of the device.

Monitor List

All the Web Smart Devices in the Monitor List can be monitored; you can also receive traps and show the status of the device.

System word definitions in the Monitor List:

- **S:** Shows the system symbol of the WebSmart device,  represents a device that is not alive.
- **IP Address:** Shows the current IP address of the device.
- **MAC Address:** Shows the device MAC Address.

- **Protocol version:** Shows the version of the Utility protocol.
- **Product Name:** Shows the device product name.
- **System Name:** Shows the appointed device system name.
- **Location:** Shows where the device is located.
- **Trap IP:** Shows the IP where the Trap is to be sent.
- **Subnet Mask:** Shows the Subnet Mask set of the device.
- **Gateway:** Shows the Gateway set of the device.

View Trap: **The Trap function can receive the events that occur on the Switch in the Monitor List.**

There is a light indicator behind the “View Trap” button. When the light is green, it means that there is no trap transmitted, and when it is red, it means that there is new trap transmitted, reminding us to view the trap. (Figure 8)

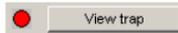


Figure 8.

When the “View Trap” button is clicked, a Trap Information window will pop up. It will display the trap information including the Symbol, Time, Device IP, and the Event occurred. (Figure 9)

The symbol “” represents the trap signal; this symbol will disappear after you review and click on the event record.

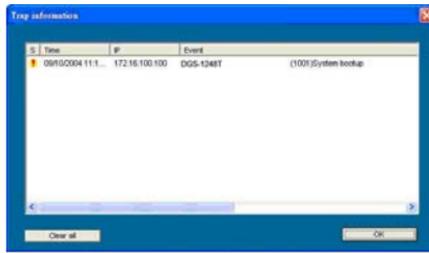


Figure 9.

Note: In order to receive Trap information, the Switch has to be configured with Trap IP and Trap Events in the Web browser, which are available in the

Trap Setting Menu (see Page 45 for details).

Add Item: **To add a device to the Monitor List manually, enter the IP Address of the device that you want to monitor.**

Delete Item: **To delete the device in the Monitor List.**

Device Setting

You can set the device by using the function key in the Device Setting Dialog box.

Configuration Setting: In this Configuration Setting, you can set the IP Address, Subnet Mask, Gateway, Set Trap to (Trap IP Address), System name, and Location.

Select the device in the Discovery list or Monitor List and press this button, then the Configuration Setting window will pop up (Figure 10). After filling in the data that you want to change, you must fill in the password and press the “Set” button to process the data change immediately. The default password of this 48-Port 10/100/1000Mbps Gigabit Ethernet Web Smart Switch configuration is “*admin.*”

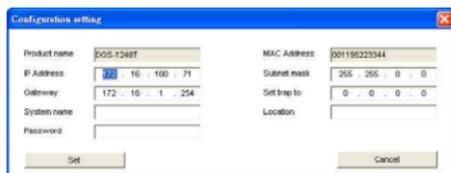


Figure 10. Configuration Setting

Password Change: You can use this when you need to change the password. Fill in the required passwords in the dialog boxes and press the “Set” button to process the password change immediately.



Figure 11. Password Change

Firmware Upgrade: When the device has a new function, there will be a new firmware to update the device; use this function to upgrade the firmware

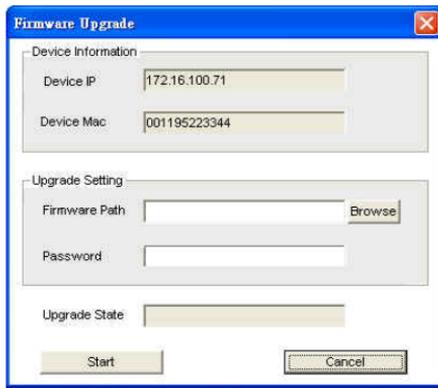


Figure 12.

Web Access: Double click the device in the Monitor List or select a device in the Monitor List and press the “*Web Access*” button to access the device in Web browser.

Toolbar

The toolbar in the Web Management Utility has four main tabs: File, View, Options, and Help.

In the “*File TAB*”, there is Monitor Save, Monitor Save As, Monitor Load, and Exit.

Monitor Save: To record the settings of the Monitor List to the default

settings so that when you open the Web Management Utility the next time, it will automatically load the default recorded setting.

- **Monitor Save As:** To record the setting of the Monitor List to an appointed filename and file path.
- **Monitor Load:** To manually load the setting file of the Monitor List.
- **Exit:** To exit the Web Management Utility.

In the “*View TAB*”, there are the view log and clear log functions: the view log function will help you display trap settings.

- **View Log:** To display the event of the Web Management Utility and the device.
- **Clear Log:** To clear the log.

In the “*Option TAB*”, there is the Refresh Time function. This function helps you to refresh the time for monitoring the device. Choose *15 secs, 30 secs, 1 min, 2 min, and 5 min* to select the time for monitoring.

In the “*Help TAB*”, there is About function, it will show out the version of the Web Management Utility.

Configuring the Switch

The Web Smart 48-Port 10/100/1000Mbps Gigabit Switch has a Web GUI interface for smart switch configuration. The Switch can be configured through the Web Browser. A network administrator can manage, control, and monitor the Switch from the local LAN. This section indicates how to configure the Switch to enable its smart functions including:

- ◆ Port Setting (Speed/Disable, Duplex mode, Flow Control and Port base QoS)
- ◆ Virtual LAN Group setting (VLAN)
- ◆ Trunk
- ◆ Port Mirroring
- ◆ System Setting
- ◆ Device status and Statistics

Login

Before you configure this device, note that when the Web Smart Switch is

configured through an Ethernet connection, make sure the manager PC is set

on same the IP network. For example, when the default network address of the default IP address of the Web Smart Switch is *192.168.0.1*, then the manager PC should be set at *192.168.0.x* (where *x* is a number between 2 and 254), and the default subnet mask is *255.255.255.0*.

Open Internet Explorer 5.0 or above Web browser.

Enter the IP address *http://192.168.0.1* (the factory-default IP address setting) into the address location.



Figure 13.

Or through the Web Management Utility, you do not need to remember the IP Address. Select the device shown in the Monitor List of the Web Management Utility to settle the device on the Web Browser.

When the following dialog page appears, enter the default password "*admin*" and press Login to enter the main configuration window.

Login	
System Name :	
Location Name :	
IP Address :	192.168.0.1
MAC Address :	00-11-22-33-44-55
password	<input type="text"/> <input type="button" value="Login"/>

Figure 14.

After entering the password, the main page appears, and the screen will display the device status.

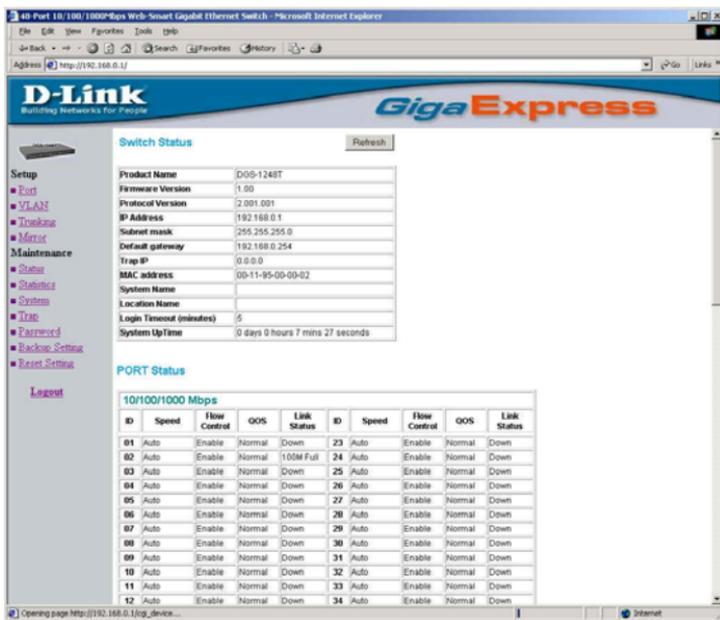


Figure 15. Device Status

Setup Menu

When the main page appears, find the *Setup menu* on the left side of the screen (Figure 16). Click on the setup item that you want to configure. There are eleven options: *Port Settings*, *VLAN Settings*, *Trunk Setting*, *Mirror Setting*, *Device Status*, *Statistics*, *System Settings*, *Trap Setting*, *Password Setting*, *Backup Setting*, and *Reset Setting* as shown in the Main Menu screen.



Figure 16. Setup menu

Configuring Setup Setting

There are four items, including *Port Settings*, *VLAN Settings*, *Trunk Settings*, and *Mirror Settings* in Setup menu.

Port Settings

In the Port Settings menu (Figure 17), this page will display each port's status. Press the ID parameter to set each port's *Speed*, *Flow Control*, *QoS priority*, and *Link Status*. When you need to renew the posted information, press the "Refresh" button.

The *Link Status* in the screen will display the connection speed and duplex mode; otherwise this dialog box will display *down* when the port is disconnected.

[Refresh](#)

10/100/1000 Mbps									
ID	Speed	Flow Control	QoS	Link Status	ID	Speed	Flow Control	QoS	Link Status
01	Auto	Enable	Normal	Down	23	Auto	Enable	Normal	Down
02	Auto	Enable	Normal	Down	24	Auto	Enable	Normal	Down
03	Auto	Enable	Normal	Down	25	Auto	Enable	Normal	Down
04	Auto	Enable	Normal	Down	26	Auto	Enable	Normal	Down
05	Auto	Enable	Normal	Down	27	Auto	Enable	Normal	Down
06	Auto	Enable	Normal	Down	28	Auto	Enable	Normal	Down
07	Auto	Enable	Normal	Down	29	Auto	Enable	Normal	Down
08	Auto	Enable	Normal	Down	30	Auto	Enable	Normal	Down
09	Auto	Enable	Normal	Down	31	Auto	Enable	Normal	Down
10	Auto	Enable	Normal	Down	32	Auto	Enable	Normal	Down
11	Auto	Enable	Normal	Down	33	Auto	Enable	Normal	Down
12	Auto	Enable	Normal	Down	34	Auto	Enable	Normal	Down
13	Auto	Enable	Normal	Down	35	Auto	Enable	Normal	Down
14	Auto	Enable	Normal	Down	36	Auto	Enable	Normal	Down
15	Auto	Enable	Normal	Down	37	Auto	Enable	Normal	Down
16	Auto	Enable	Normal	Down	38	Auto	Enable	Normal	Down
17	Auto	Enable	Normal	Down	39	Auto	Enable	Normal	Down
18	Auto	Enable	Normal	Down	40	Auto	Enable	Normal	Down
19	Auto	Enable	Normal	Down	41	Auto	Enable	Normal	Down
20	Auto	Enable	Normal	Down	42	Auto	Enable	Normal	Down

Figure 17. Port Setting

Note 1: Be sure to reset the Gigabit port when transferring the media type (Fiber to Copper or Copper to Fiber).

Note 2: The priority of Gigabit Fiber port is higher than Copper.

To change the port setting, click on the ID parameter to enter the selected port to configure its Speed/Disable, Flow control, and QoS setting.

PORT Settings

Please be aware that speed must set as same as link partner. Otherwise, packet loss or link error might occur.

ID	Speed	Flow Control	QoS
48	Auto	Enable	Normal

[Apply](#)

Figure 18

Speed/Disable:

This setting has six modes—100M Full, 100M Half, 10M Full, 10M Half, Auto and Disable—for speed or port disable selections.

Flow Control:

This setting determines whether or not the Switch will be handling flow control. Set Flow Control to *Enable* for avoiding data transfer overflow. If it is set to *Disable*, there is either no flow control or other hardware/software management.

When the port is set to *forced mode*, the flow control will automatically be set to *Disable*.

QoS:

The Switch supports two kinds of QoS mode, one is 802.1p based QoS and the other is port based QoS.

When the port receives a data packet that includes the 802.1p QoS Tag, the priority rule will follow the 802.1p QoS Tag. If the port receives a data packet without the 802.1p QoS Tag, the priority rule will follow the port based QoS setting.

VLAN Settings (Virtual Local Area Network)

A VLAN is a collection of switch ports that make up a single broadcast domain. You can configure a VLAN for a single switch, or for multiple switches. When you create a VLAN, you can control traffic flow and ease the administration of moves, adds, and changes on the network, by eliminating the need to change physical cabling.

On VLAN settings, there are two main settings, VID Table Setting, Port VLAN Setting, and Port Egress Setting.

VID Table Setting: Select the VID group that you set.

When you select VID Table Setting, press “Add new VID” to create new VID group, from port 01 ~ port 48, select Untag Port, Tag Port, or Not Member for each port. To save the VID group, press “Apply” button. To remove the selected VID group, select the VID group and press “Remove the VID” button. To modify the VID group setting, select the VID group and change the setting, and press “Apply” button to save the settings.



Figure 18.

Port VID Setting:

When you select Port VLAN setting, fill in each port's PVID value between 1 and 4094.



Figure 19.

Port Egress Setting:

The Port Egress is used to set the 802.1Q VLAN Egress rule in each port; the selected port will include the TCI (Tag Control Information) data packets.

IEEE 802.1Q VLAN Port Egress Setting ▾

Egress Rule	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Tag/Untag	<input type="checkbox"/>																							
Egress Rule	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
Tag/Untag	<input type="checkbox"/>																							

Apply

Figure 20.

Trunk Setting

The Trunk function enables the Switch to cascade two or more devices with larger bandwidths.

There are ten Trunking groups to be set, and there are default ports in each member. Click “Enable” to use the trunk function, select the ports in each member to be trunk, and click “Apply” to activate the selected trunk group.

Trunk Setting

The selected trunk port setting must set to the same VLAN Group.

ID	Enable	Member							
01	<input type="checkbox"/>	01	02	03	04	05	06	07	08
		<input type="checkbox"/>							
02	<input type="checkbox"/>	09	10	11	12	13	14	15	16
		<input type="checkbox"/>							
03	<input type="checkbox"/>	17	18	19	20				
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
04	<input type="checkbox"/>	21	22	23	24				
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
05	<input type="checkbox"/>	25	26	27	28				
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
06	<input type="checkbox"/>	29	30	31	32				
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
07	<input type="checkbox"/>	33	34	35	36				
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
08	<input type="checkbox"/>	37	38	39	40				
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
09	<input type="checkbox"/>	41	42	43	44				
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
10	<input type="checkbox"/>	45	46	47	48				
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

Figure 21. Trunk Settings

Be sure that the selected trunk setting port is connected to the device with a same VLAN group.

Press “Refresh” when you need to renew the posted information.

Switch Status

Refresh

Product Name	DOS-1248T
Firmware Version	1.00
Protocol Version	2.001.001
IP Address	192.168.0.177
Subnet mask	255.255.255.0
Default gateway	192.168.0.254
Trap IP	0.0.0.0
MAC address	00-11-95-00-00-02
System Name	
Location Name	
Login Timeout (minutes)	5
System Up Time	0 days 1 hours 34 mins 5 seconds

PORT Status

10/100/1000 Mbps									
ID	Speed	Flow Control	QOS	Link Status	ID	Speed	Flow Control	QOS	Link Status
01	Auto	Enable	Normal	Down	23	Auto	Enable	Normal	Down
02	Auto	Enable	Normal	Down	24	Auto	Enable	Normal	Down
03	Auto	Enable	Normal	Down	25	Auto	Enable	Normal	Down
04	Auto	Enable	Normal	Down	26	Auto	Enable	Normal	Down
05	Auto	Enable	Normal	Down	27	Auto	Enable	Normal	Down

Figure 23.

Statistics

The Statistics Menu screen will show the status of each port packet count.

Statistics

Refresh Clear Counters

ID	Tx	Rx	Tx Error	Rx Error	ID	Tx	Rx	Tx Error	Rx Error
10/100/1000 Mbps									
01	0	0	0	0	23	0	0	0	0
02	0	0	0	0	24	0	0	0	0
03	0	0	0	0	25	0	0	0	0
04	0	0	0	0	26	0	0	0	0
05	0	0	0	0	27	0	0	0	0
06	0	0	0	0	28	0	0	0	0
07	0	0	0	0	29	0	0	0	0
08	0	0	0	0	30	0	0	0	0
09	0	0	0	0	31	0	0	0	0
10	0	0	0	0	32	0	0	0	0
11	0	0	0	0	33	0	0	0	0
12	0	0	0	0	34	0	0	0	0
13	0	0	0	0	35	0	0	0	0
14	0	0	0	0	36	0	0	0	0
15	0	0	0	0	37	0	0	0	0
16	0	0	0	0	38	0	0	0	0
17	0	0	0	0	39	0	0	0	0
18	0	0	0	0	40	0	0	0	0
19	0	0	0	0	41	0	0	0	0
20	0	0	0	0	42	0	0	0	0
21	0	0	0	0	43	0	0	0	0
22	0	0	0	0	44	0	0	0	0
10/100/1000 Mbps									
45	0	0	0	0	46	0	0	0	0
47	0	0	0	0	48	723	726238	0	13

Figure 24. Statistics

For detailed packet information, click on the ID parameter as in Figure 25.

Port Statistics

Refresh

Port	48		
Receive Total		Transmit Total	
Packets	731723	Packets	729
Bytes	72547804	Bytes	271319
High Priority Packets	0	High Priority Packets	0
Low Priority Packets	0	Low Priority Packets	0
Broadcast	702799	Broadcast	0
Multicast	26542	Multicast	0
Unicast Pkts	2369	Unicast Pkts	729
PausePkts	0	PausePkts	0
Receive Size Counters		Transmit Size Counters	
64 Bytes	578185	64 Bytes	188
65 - 127 Bytes	89758	65 - 127 Bytes	138
128 - 255 Bytes	20408	128 - 255 Bytes	107
256 - 511 Bytes	18889	256 - 511 Bytes	100
512 - 1023 Bytes	21806	512 - 1023 Bytes	121
1024 - Bytes	76	1024 - Bytes	2680
Receive Error Counters		Transmit Error Counters	
CRC/Alignment	1	Collisions	0
Undersize	0	FIFO Drops	0
Oversize	12	Drops	0
Fragments	0	SingleCollision	0
Jabber	0	MultipleCollision	0
Drops	0	Deferred Transmit	0
SA Changes	0	Late Collision	0
ExcessSizeDisc	0	Excessive Collisions	0
SymbolErrors	0	FrameDisc	0
FCS Errors	1		

Figure 25.

System Setting

The System Setting includes the System name, Location name, Login Timeout, IP Address, Subnet Mask, and Gateway. Through the Web Management Utility, you can easily recognize the device by using the System Name and the Location Name.

The Login Timeout is to set the idle time-out for security issues. When there is no action in running the Web Smart Utility and it times out, you must re-login to Web Smart Utility before you set the Utility.

Fill in the IP Address, Subnet Mask and Gateway for the device.

System Setting

System Name	<input type="text" value="48P Gigabit Switch"/>
Location Name	<input type="text" value="R & D"/>
Login Timeout (3 - 30 minutes)	<input type="text" value="5"/>
IP Address	
IP address	<input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="0"/> <input type="text" value="177"/>
Subnet mask	<input type="text" value="255"/> <input type="text" value="255"/> <input type="text" value="255"/> <input type="text" value="0"/>
Gateway	<input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="0"/> <input type="text" value="254"/>
<input type="button" value="Apply"/>	

Figure 26.

Trap Setting

The Trap Setting enables the device to monitor the Trap through the Web Management Utility. Set the Trap IP Address of the manager where the trap is to be sent.

Trap Setting

Trap IP	192 168 0 43
	VID: 1
System Events	<input checked="" type="checkbox"/> device bootup <input checked="" type="checkbox"/> illegal login
Fiber Port Events	<input checked="" type="checkbox"/> link up / link down

Figure 27. Trap Setting

System Events: Monitoring the system's trap.

Device Bootup: A trap when booting up the system.

Illegal Login: A trap when there is a wrong password login, and it will record the IP from where the login attempt was made.

Password Setting

Password is the invaluable tool for the manager to secure the Web Management Switch. You can use this function to change the password. If you forget the password, press the "Reset" button in the rear panel of the Switch. The current setting includes VLAN, Port Setting... etc. will be lost and the Switch will be restored to the default setting.

Password Setting

The maximum length is 20 and is case-sensitive.

Old Password	<input type="text"/>
New Password	<input type="text"/>
Re-type New Password	<input type="text"/>

Figure 28. Set Password

Backup Setting

The backup tools help you to backup the current setting of the Switch. Once you need to backup the setting, press the "Backup" button to save the setting.

To restore a current setting file to the device, you must specify the backup file and press the “Restore” button to process the setting of the recorded file.

Backup Setting

Note: the switch will reboot after successfully restoring the backup file.

Backup current setting to file :

Restore saved setting from file :

Figure 29. Backup Setting

Note: When restoring a recorded file, the current password will not be erased.

Reset Setting

The Factory Reset button helps you to reset the device back to the default setting from the factory. Be aware that the entire configuration will be reset; the IP address of the device will be set to the default setting of 192.168.0.1.

Factory Reset

Note: all configuration settings will return to their default value.

Figure 30. Reset Setting

Logout

When you select this function, the Web configuration will log out and return to first Login page.

Login	
System Name :	
Location Name :	
IP Address :	172.16.2.25
MAC Address :	00-11-11-11-11-27
Password	<input type="text"/>
	<input type="button" value="Login"/>

Figure 31. Logout

TECHNICAL SPECIFICATIONS

General	
Standards	IEEE 802.3 10BASE-T Ethernet IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3ab 1000BASE-T Gigabit Ethernet IEEE 802.3x Full Duplex Flow Control IEEE 802.3z 1000BASE-SX/LX Gigabit Ethernet
Protocol	CSMA/CD
Data Transfer Rate	Ethernet: 10Mbps (half-duplex), 20Mbps (full-duplex) Fast Ethernet: 100Mbps (half-duplex), 200Mbps (full-duplex) Gigabit Ethernet: 2000Mbps (full-duplex)
Topology	Star
Network Cables	10BASE-T: 2-pair UTP Cat. 3, 4, 5; up to 100m 100BASE-TX: 2-pair UTP Cat. 5; up to 100m 1000BASE-T: 4-pair UTP Cat. 5; up to 100m Fiber module: mini-GBIC Fiber module
Number of Ports	48 × 10/100/1000Mbps Auto-MDIX RJ-45 ports 4 × mini-GBIC fiber slots
Physical and Environmental	
AC inputs	100-240V AC, 50-60 Hz internal universal power supply
Power Consumption	68.88 Watts (Max)
Temperature	Operating: 0° ~ 40° C (32° ~ 104° F), Storage: -10° ~ 70° C (14° ~ 158° F)
Humidity	Operating: 10% ~ 90%, Storage: 5% ~ 90%
Dimensions	440 x 310 x 44 mm (W x H x D) (17.3 x 12.2 x 1.7 in)
EMI:	FCC Class A, CE Mark Class A, VCCI Class A
Safety:	CUL

Performance	
Transmits Method:	Store-and-forward
Filtering Address Table:	8K entries per device
Packet Filtering/Forwarding Rate:	10Mbps Ethernet: 14,880/pps 100Mbps Fast Ethernet: 148,800/pps 1000Mbps Gigabit Ethernet: 1,488,000/pps
MAC Address Learning:	Automatic update
Transmits Method:	Store-and-forward
RAM Buffer:	1632KBytes per device

WARRANTY AND REGISTRATION INFORMATION

(All countries and regions excluding USA)

Wichtige Sicherheitshinweise

1. Bitte lesen Sie sich diese Hinweise sorgfältig durch.
2. Heben Sie diese Anleitung für den späteren Gebrauch auf.
3. Vor jedem Reinigen ist das Gerät vom Stromnetz zu trennen. Verwenden Sie keine Flüssig- oder Aerosolreiniger. Am besten dient ein angefeuchtetes Tuch zur Reinigung.
4. Um eine Beschädigung des Gerätes zu vermeiden sollten Sie nur Zubehörteile verwenden, die vom Hersteller zugelassen sind.
5. Das Gerät ist vor Feuchtigkeit zu schützen.
6. Bei der Aufstellung des Gerätes ist auf sichern Stand zu achten. Ein Kippen oder Fallen könnte Verletzungen hervorrufen. Verwenden Sie nur sichere Standorte und beachten Sie die Aufstellhinweise des Herstellers.
7. Die Belüftungsöffnungen dienen zur Luftzirkulation die das Gerät vor Überhitzung schützt. Sorgen Sie dafür, daß diese Öffnungen nicht abgedeckt werden.
8. Beachten Sie beim Anschluß an das Stromnetz die Anschlußwerte.
9. Die Netzanschlußsteckdose muß aus Gründen der elektrischen Sicherheit einen Schutzleiterkontakt haben.
10. Verlegen Sie die Netzanschlußleitung so, daß niemand darüber fallen kann. Es sollte auch nichts auf der Leitung abgestellt werden.
11. Alle Hinweise und Warnungen die sich am Geräten befinden sind zu beachten.
12. Wird das Gerät über einen längeren Zeitraum nicht benutzt, sollten Sie es vom Stromnetz trennen. Somit wird im Falle einer Überspannung eine Beschädigung vermieden.
13. Durch die Lüftungsöffnungen dürfen niemals Gegenstände oder Flüssigkeiten in das Gerät gelangen. Dies könnte einen Brand bzw. Elektrischen Schlag auslösen.
14. Öffnen Sie niemals das Gerät. Das Gerät darf aus Gründen der elektrischen Sicherheit nur von autorisiertem Servicepersonal geöffnet werden.
15. Wenn folgende Situationen auftreten ist das Gerät vom Stromnetz zu trennen und von einer qualifizierten Servicestelle zu überprüfen:
 - a. Netzkabel oder Netzstecker sind beschädigt.
 - b. Flüssigkeit ist in das Gerät eingedrungen.
 - c. Das Gerät war Feuchtigkeit ausgesetzt.
 - d. Wenn das Gerät nicht der Bedienungsanleitung entsprechend funktioniert oder Sie mit Hilfe dieser Anleitung keine Verbesserung erzielen.
 - e. Das Gerät ist gefallen und/oder das Gehäuse ist beschädigt.
 - f. Wenn das Gerät deutliche Anzeichen eines Defektes aufweist.
16. Bei Reparaturen dürfen nur Originalersatzteile bzw. den Originalteilen entsprechende Teile verwendet werden. Der Einsatz von ungeeigneten Ersatzteilen kann eine weitere Beschädigung hervorrufen.
17. Wenden Sie sich mit allen Fragen die Service und Reparatur betreffen an Ihren

Servicepartner. Somit stellen Sie die Betriebssicherheit des Gerätes sicher.

18. Zum Netzanschluß dieses Gerätes ist eine geprüfte Leitung zu verwenden, Für einen Nennstrom bis 6A und einem Gerätegewicht größer 3kg ist eine Leitung nicht leichter als H05VV-F, 3G, 0.75mm² einzusetzen.

WARRANTIES EXCLUSIVE

IF THE D-LINK PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT D-LINK'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. D-LINK NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF D-LINK'S PRODUCTS. D-LINK SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY THE CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING OR OTHER HAZARD.

LIMITATION OF LIABILITY

IN NO EVENT WILL D-LINK BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOSS OF PROFITS, COST OF COVER OR OTHER INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING OUT THE INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE OR INTERRUPTION OF A D- LINK PRODUCT, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

IF YOU PURCHASED A D-LINK PRODUCT IN THE UNITED STATES, SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Limited Warranty

Hardware:

D-Link warrants each of its hardware products to be free from defects in workmanship and materials under normal use and service for a period commencing on the date of purchase from D-Link or its Authorized Reseller and extending for the length of time

stipulated by the Authorized Reseller or D-Link Branch Office nearest to the place of purchase.

This Warranty applies on the condition that the product Registration Card is filled out and returned to a D-Link office within ninety (90) days of purchase. A list of D-Link offices is provided at the back of this manual, together with a copy of the Registration Card.

If the product proves defective within the applicable warranty period, D-Link will provide repair or replacement of the product. D-Link shall have the sole discretion whether to repair or replace, and replacement product may be new or reconditioned. Replacement product shall be of equivalent or better specifications, relative to the defective product, but need not be identical. Any product or part repaired by D-Link pursuant to this warranty shall have a warranty period of not less than 90 days, from date of such repair, irrespective of any earlier expiration of original warranty period. When D-Link provides replacement, then the defective product becomes the property of D-Link.

Warranty service may be obtained by contacting a D-Link office within the applicable warranty period, and requesting a Return Material Authorization (RMA) number. If a Registration Card for the product in question has not been returned to D-Link, then a proof of purchase (such as a copy of the dated purchase invoice) must be provided. If Purchaser's circumstances require special handling of warranty correction, then at the time of requesting RMA number, Purchaser may also propose special procedure as may be suitable to the case.

After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. The package must be mailed or otherwise shipped to D-Link with all costs of mailing/shipping/insurance prepaid. D-Link shall never be responsible for any software, firmware, information, or memory data of Purchaser contained in, stored on, or integrated with any product returned to D-Link pursuant to this warranty.

Any package returned to D-Link without an RMA number will be rejected and shipped back to Purchaser at Purchaser's expense, and D-Link reserves the right in such a case to levy a reasonable handling charge in addition mailing or shipping costs.

Software:

Warranty service for software products may be obtained by contacting a D-Link office within the applicable warranty period. A list of D-Link offices is provided at the back of this manual, together with a copy of the Registration Card. If a Registration Card for the product in question has not been returned to a D-Link office, then a proof of purchase (such as a copy of the dated purchase invoice) must be provided when requesting warranty service. The term "purchase" in this software warranty refers to the purchase transaction and resulting license to use such software.

D-Link warrants that its software products will perform in substantial conformance with the applicable product documentation provided by D-Link with such software product, for a period of ninety (90) days from the date of purchase from D-Link or its Authorized Reseller. D-Link warrants the magnetic media, on which D-Link provides its software product, against failure during the same warranty period. This warranty applies to purchased software, and to replacement software provided by D-Link pursuant to this warranty, but shall not apply to any update or replacement which may be provided for download via the Internet, or to any update which may otherwise be provided free of charge.

D-Link's sole obligation under this software warranty shall be to replace any defective software product with product which substantially conforms to D-Link's applicable product documentation. Purchaser assumes responsibility for the selection of appropriate application and system/platform software and associated reference materials. D-Link makes no warranty that its software products will work in combination with any hardware, or any application or system/platform software product provided by any third party, excepting only such products as are expressly represented, in D-Link's applicable product documentation as being compatible. D-Link's obligation under this warranty shall be a reasonable effort to provide compatibility, but D-Link shall have no obligation to provide compatibility when there is fault in the third-party hardware or software. D-Link makes no warranty that operation of its software products will be uninterrupted or absolutely error-free, and no warranty that all defects in the software product, within or without the scope of D-Link's applicable product documentation, will be corrected.

WARRANTY AND REGISTRATION INFORMATION (USA ONLY)



Limited Warranty (USA Only)

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

Limited Warranty: D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

Limited Lifetime Warranty for the Product(s) is defined as follows:

- Hardware for as long as the original customer/end user owns the product, or five years after product discontinuance, whichever occurs first (excluding power supplies and fans)
- Power Supplies and Fans Three (3) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as

contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty: The Limited Warranty provided hereunder for hardware and software of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim: The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.
- The original product owner must obtain a Return Material Authorization ("RMA") number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.

The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, 17595 Mt. Herrman Street, Fountain Valley, CA. 92708. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or

any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered: This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN

WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY

Governing Law: This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

Trademarks: D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

Copyright Statement: No part of this publication or documentation accompanying this

Product may be reproduced in any form or by any means or used to make any derivative

such as translation, transformation, or adaptation without permission from D-Link

Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of

1976. Contents are subject to change without prior notice. Copyright® 2002 by D-Link

Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty outside the United States, please contact corresponding local D-Link office.

Warranty Registration

Register online your D-Link product at <http://support.dlink.com/register/>

D-Link Offices

Australia

D-Link Australasia

1 Giffnock Avenue, North Ryde, NSW 2113, Sydney, Australia

TEL: 61-2-8899-1800 FAX: 61-2-8899-1868

TOLL FREE (Australia): 1300 766 868

TOLL FREE (New Zealand): 0800-900900

URL: www.dlink.com.au

E-MAIL: support@dlink.com.au & info@dlink.com.au

Brazil

D-Link Brasil Ltda.

Rua Tavares Cabral 102 - Conj. 31 e 33

05423-030 Pinheiros, Sao Paulo, Brasil

TEL: (5511) 3094 2910 to 2920 FAX: (5511) 3094 2921

URL: www.dlink.com.br

Canada

D-Link Canada

2180 Winston Park Drive, Oakville,

Ontario, L6H 5W1 Canada

TEL: 1-905-829-5033 FAX: 1-905-829-5223

BBS: 1-965-279-8732 FTP: [ftp.dlinknet.com](ftp://ftp.dlinknet.com)

TOLL FREE: 1-800-354-6522

URL: www.dlink.ca E-MAIL: techsup@dlink.ca

Chile

D-Link South America (Sudamérica)

Isidora Goyenechea 2934

Oficina 702, Las Condes, Santiago, Chile
TEL: 56-2-232-3185 FAX: 56-2-232-0923
URL: www.dlink.com.cl

China

D-Link Beijing

Level 5, Tower W1, The Tower, Oriental Plaza
No.1, East Chang An Ave., Dong Cheng District
Beijing, 100738, China
TEL: (8610) 85182529/30/31/32/33
FAX: (8610) 85182250
URL: www.dlink.com.cn E-MAIL: webmaster@dlink.com.cn

Denmark

D-Link Denmark

Naverland 2, DK-2600 Glostrup, Copenhagen, Denmark
TEL: 45-43-969040 FAX: 45-43-424347
URL: www.dlink.dk E-MAIL: info@dlink.dk

Egypt

D-Link Middle East

7 Assem Ebn Sabet Street, Heliopolis, Cairo, Egypt
TEL: 202-624-4615 FAX: 202-624-583
URL: www.dlink-me.com
E-MAIL: support@dlink-me.com & dlinkegypt@dlink-me.com

Finland

D-Link Finland

Pakkalankuja 7A, 01510 Vantaa, Finland
TEL: 358-9-2707-5080 FAX: 358-9-2707-5081
URL: www.dlink-fi.com

France**D-Link France**

Le Florilege, No. 2, Allée de la Fresnerie,

78330 Fontenay-le-Fleury, France

TEL: 33-1-3023-8688 FAX: 33-1-3023-8689

URL: www.dlink-france.fr

E-MAIL: info@dlink-france.fr

Germany**D-Link Central Europe (D-Link Deutschland GmbH)**

Schwalbacher Strasse 74, D-65760 Eschborn, Germany

TEL: 49-6196-77990 FAX: 49-6196-7799300

BBS: 49-(0) 6192-971199 (analog) & BBS: 49-(0) 6192-971198 (ISDN)

INFO: 00800-7250-0000 (toll free) & HELP: 00800-7250-4000 (toll free)

REPAIR: 00800-7250-8000 & HELP: support.dlink.de

URL: www.dlink.de & E-MAIL: info@dlink.de

India**D-Link India**

Plot No.5, Kurla -Bandra Complex Rd., Off Cst Rd.,

Santacruz (East), Mumbai, 400 098 India

TEL: 91-022-2652-6696/6788/6623

FAX: 91-022-2652-8914/8476

URL: www.dlink.co.in

E-MAIL: service@dlink.co.in & tushars@dlink.co.in

Italy**D-Link Mediterraneo Srl/D-Link Italia**

Via Nino Bonnet n. 6/B, 20154, Milano, Italy

TEL: 39-02-2900-0676 FAX: 39-02-2900-1723

URL: www.dlink.it E-MAIL: info@dlink.it

Japan**D-Link Japan**

10F, 8-8-15 Nishi-Gotanda, Shinagawa-ku, Tokyo 141, Japan

TEL: 81-3-5434-9678 FAX: 81-3-5434-9868

URL: www.d-link.co.jp E-MAIL: kida@d-link.co.jp

Netherlands**D-Link Benelux**

Lichtenauerlaan 102-120, 3062 ME Rotterdam, Netherlands

TEL: +31-10-2045740 FAX: +31-10-2045880

URL: www.d-link-benelux.nl & www.dlink-benelux.be

E-MAIL: info@dlink-benelux.com

Norway**D-Link Norway**

Karihaugveien 89, 1086 Oslo

TEL: 47-22-309075 FAX: 47-22-309085

SUPPORT: 800-10-610 & 800-10-240 (DI-xxx)

URL: www.dlink.no

Russia**D-Link Russia**

129626 Russia, Moscow, Graphskiy per., 14, floor 6

TEL/FAX: +7 (095) 744-00-99

URL: www.dlink.ru E-MAIL: vl@dlink.ru

Singapore**D-Link International**

1 International Business Park, #03-12 The Synergy,

Singapore 609917

TEL: 65-6774-6233 FAX: 65-6774-6322

E-MAIL: info@dlink.com.sg URL: www.dlink-intl.com

South Africa**D-Link South Africa**

Einstein Park II, Block B, 102-106 Witch-Hazel Avenue
Highveld Technopark

Centurion, Gauteng, Republic of South Africa

TEL: +27-12-665-2165 FAX: +27-12-665-2186

URL: www.d-link.co.za E-MAIL: attie@d-link.co.za

Spain**D-Link Iberia S.L.**

Sabino de Arana, 56 bajos, 08028 Barcelona, Spain

TEL: 34 93 409 0770 FAX: 34 93 491 0795

URL: www.dlink.es E-MAIL: info@dlink.es

Sweden**D-Link Sweden**

P. O. Box 15036, S-167 15 Bromma, Sweden

TEL: 46-8-564-61900 FAX: 46-8-564-61901

URL: www.dlink.se E-MAIL: info@dlink.se

Taiwan**D-Link Taiwan**

2F, No. 119, Pao-chung Road, Hsin-tien, Taipei, Taiwan

TEL: 886-2-2910-2626 FAX: 886-2-2910-1515

URL: www.dlinktw.com.tw E-MAIL: dssqa@dlinktw.com.tw

Turkey**D-Link Turkiye**

Beybi Giz Plaza, Ayazaga Mah. Meydan Sok. No. 28

Maslak 34396, Istanbul-Turkiye

TEL: 90-212-335-2553 (direct) & 90-212-335-2525 (pbx)

FAX: 90-212-335-2500 E-MAIL: dlinkturkey@dlink-me.com

E-MAIL: support@dlink-me.com

U.A.E.**D-Link Middle East FZCO**

P.O. Box18224 R/8, Warehouse UB-5

Jebel Ali Free Zone, Dubai – United Arab Emirates

TEL: (Jebel Ali): 971-4-883-4234

FAX: (Jebel Ali): 971-4-883-4394 & (Dubai): 971-4-335-2464

E-MAIL: dlinkme@dlink-me.com & support@dlink-me.com

U.K.**D-Link Europe (United Kingdom) Ltd**

4th Floor, Merit House, Edgware Road, Colindale, London

NW9 5AB United Kingdom

TEL: 44-020-8731-5555 SALES: 44-020-8731-5550

FAX: 44-020-8731-5511 SALES: 44-020-8731-5551

BBS: 44 (0) 181-235-5511

URL: www.dlink.co.uk E-MAIL: info@dlink.co.uk

U.S.A.**D-Link U.S.A.**

17595 Mt. Hermmann, Fountain Valley, CA 92708-4160, USA

TEL: 1-949-788-0805 FAX: 1-949-753-7033

INFO: 1-800-326-1688 URL: www.dlink.com

E-MAIL: tech@dlink.com & support@dlink.com

Registration Card (Excluding USA)

Print, type or use block letters.

Your name: Mr./Ms _____

Organization: _____ Dept. _____

Your title at organization: _____

Telephone: _____ Fax: _____

Organization's full address: _____

Country: _____

Date of purchase (Month/Day/Year): _____

Product Model	Product Serial No.	* Product installed in type of computer (e.g., Compaq 486)	* Product installed in computer serial No.

(* Applies to adapters only)

Product was purchased from:

Reseller's name: _____

Telephone: _____ Fax: _____

Reseller's full address: _____

Answers to the following questions help us to support your product:

1. Where and how will the product primarily be used?

Home Office Travel Company Business Home Business Personal Use

2. How many employees work at installation site?

1 employee 2-9 10-49 50-99 100-499 500-999 1000 or more

3. What network protocol(s) does your organization use ?

XNS/IPX TCP/IP DECnet Others _____

4. What network operating system(s) does your organization use ?

D-Link LANsmart Novell NetWare NetWare Lite SCO Unix/Xenix PC NFS 3Com 3+Open

Banyan Vines DECnet Pathwork Windows NT Windows NTAS Windows '95

Others _____

5. What network management program does your organization use ?

D-View HP OpenView/Windows HP OpenView/Unix SunNet Manager Novell NMS

NetView 6000 Others _____

6. What network medium/media does your organization use ?

Fiber-optics Thick coax Ethernet Thin coax Ethernet 10BASE-T UTP/STP

100BASE-TX 100BASE-T4 100VGAnyLAN Others _____

7. What applications are used on your network?

Desktop publishing Spreadsheet Word processing CAD/CAM

Database management Accounting Others _____

8. What category best describes your company?

Aerospace Engineering Education Finance Hospital Legal Insurance/Real Estate Manufacturing

Retail/Chainstore/Wholesale Government Transportation/Utilities/Communication VAR

System house/company Other _____

9. Would you recommend your D-Link product to a friend?

Yes No Don't know yet

10. Your comments on this product?

