



METROLOGIC INSTRUMENTS INC.

**MetroSelect[®] Single-Line
Configuration Guide**

Copyright

© 2005 by Metrologic Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

TABLE OF CONTENTS

| | |
|---|-----------|
| Introduction | 1 |
| Bar Code Configuration Methods | |
| Single-Code Method | 1 |
| Multi-Code Method | 2 |
| Need to Start Over? | 2 |
| Code Types and Decode Rules | |
| UPC/EAN | 3 |
| Code 128 | 4 |
| Code 39 | 4 |
| 2 of 5 Codes | 6 |
| Codabar | 8 |
| Code 93 | 8 |
| Code 11 | 8 |
| Telepen | 9 |
| Plessey Codes | 9 |
| Additional Decode Features | 10 |
| Configurable Code Lengths | 11 |
| Supplements | 13 |
| RSS Bar Code Implementation | |
| RSS Limited Bar Codes | 19 |
| RSS Expanded Bar Codes | 19 |
| ISBT Code 128 Implementation | |
| Configuration Mode Bar Codes | 20 |
| Concatenation Configuration Mode Bar Codes | 21 |
| Pre-Defined Concatenation Configuration Mode Bar Codes | 21 |
| User-Defined Concatenation Configuration Mode Bar Codes | 22 |
| Communications | 24 |
| Scanner Operation | |
| Configuration Mode Options | 25 |
| Scan Buffers | 25 |
| Redundant Scans | 26 |

TABLE OF CONTENTS

| | |
|--|----|
| Miscellaneous Decode Features | 26 |
| Same Symbol Timeouts..... | 27 |
| LED Options | 27 |
| Beeper Options..... | 28 |
| Data Transmission Delays..... | 30 |
| Communication Timeout Options | 31 |
| Host Scanner Commands..... | 32 |
| Test Modes | 34 |
| Prefixes/Suffixes | |
| User Configurable Prefixes, All Data | 35 |
| User Configurable ID Characters, Code Specific | 36 |
| Standard Prefix Characters | 38 |
| Standard Suffix Characters..... | 40 |
| Longitudinal Redundancy Check | 41 |
| Block Check Character | 41 |
| Character Replacements | 42 |
| User Configurable Suffixes, All Data | 43 |
| Special Formats..... | 44 |
| Code Formatting | |
| UPC/EAN Formatting..... | 45 |
| Codabar Formatting..... | 47 |
| Code 39 Formatting | 48 |
| Code 11 Formatting | 48 |
| Telepen | 48 |
| Plessey | 49 |
| 2 of 5 Code Formatting | 49 |
| RS232 | |
| Parity Features | 50 |
| Baud Rate..... | 50 |
| Data/Stop Bits..... | 51 |
| Hardware Handshaking | 51 |
| Software Handshaking..... | 53 |
| Miscellaneous | 54 |

TABLE OF CONTENTS

Keyboard

| | |
|--------------------------------------|----|
| Enable Keyboard Emulation | 55 |
| Country/Scan Code Table Selects..... | 55 |
| Keyboard/System Type | 56 |
| 'Dumb' Terminal Selections | 57 |
| Special Keyboard Features | 58 |
| InterScan Code Delays | 60 |
| Control Sets | 60 |

| | |
|-------------------|-----------|
| OCIA | 62 |
|-------------------|-----------|

| | |
|-----------------------------------|-----------|
| Light Pen Parameters | 63 |
|-----------------------------------|-----------|

| | |
|--------------------------------|----|
| Set Narrow Element Width | 64 |
|--------------------------------|----|

| | |
|--|-----------|
| MS9520/9540-00 Laser Emulation Mode | 65 |
|--|-----------|

IBM 46xx Configuration

| | |
|------------------------|----|
| IBM Port..... | 66 |
| IBM Reserve Codes..... | 66 |

| | |
|------------------|-----------|
| USB | 67 |
|------------------|-----------|

Code Bytes Usage

| | |
|---|----|
| Code Bytes 0-9 | 69 |
| Reserved Codes | 70 |
| Code Type Table | 70 |
| ASCII Reference Table | 71 |
| Extended Key Code Reference Table | 75 |

MS9520 Voyager® & MS9540 VoyagerCG® Series

| | |
|----------------------------|----|
| Activation Range..... | 77 |
| CodeGate® Status | 77 |
| Laser/Scan Modes..... | 77 |
| Same Symbol Time Outs..... | 78 |

MS9524 & MS9544 VoyagerPDF® Series

| | |
|---|----|
| MicroPDF and Composite Code Handling..... | 79 |
|---|----|

TABLE OF CONTENTS

| | |
|---|-----------|
| MS9535 VoyagerBT™ | 81 |
| MS9535-5M VoyagerBT™ | 83 |
| Inventory Quantity Bar Codes..... | 85 |
| IS4125 / IS4225 Scan Engines | 86 |
| Miscellaneous Features | |
| Custom Defaults | 87 |
| Serial Program Mode..... | 88 |

INTRODUCTION

Your new scanner has been factory configured with a set of default parameters.

Since many host systems have unique formats and protocol requirements, Metrologic provides a wide range of configurable features that may be selected using this bar code based configuration tool. Once the configuration is completed, the scanner stores the settings in nonvolatile memory (NOVRAM). NOVRAM saves the settings when the power is turned off.



Every bar code with an asterisk (*) is a default setting.
Bar codes with a tilde (~) require the *Multi-Code* configuration method.

BAR CODE CONFIGURATION METHODS

The MetroSelect class of scanners can be bar code configured in two ways: the *Single-Code Method* and the *Multi-Code Method*.

- ❗ Please note that the MS6220 Pulsar® can only be configured using the *Multi-Code Method*.
- ❗ To properly configure an MS9540 scanner, all configuration codes must be scanned using the CodeGate® option.

Single-Code Method

Most features can be enabled or disabled using the *Single-Code Method*.

1. Power up the scanner.
2. Scan the bar code for the desired feature.
3. Observe a multi-toned, “save setting” beep that indicates the configuration has been saved to NOVRAM.

BAR CODE CONFIGURATION METHODS

- ❗ Please note that the MS6220 Pulsar can only be configured using the *Multi-Code Method*.
- ❗ To properly configure an MS9540 scanner, all programming codes must be scanned using the CodeGate option.

Multi-Code Method

All features can be enabled or disabled using the *Multi-Code Method*. A feature marked with a tilde (~) requires the *Multi-Code Method*.

1. Power up the scanner.
2. Scan the *enter/exit configuration mode* bar code (3 beeps).
3. Scan the bar code for the desired feature (1 beep).



Multiple features can be enabled/disabled before scanning the *enter/exit configuration mode* bar code.

4. Scan the *enter/exit configuration mode* bar code (3 beeps) and save the new configuration.



To abort a configuration change, power off the scanner before scanning the enter/exit code.

Enter/Exit Configuration Mode



NEED TO START OVER?

Scan the *Recall Default* bar code. This will erase all previous settings and return the scanner to its default communication protocol.

Keyboard Wedge interface scanners will load keyboard wedge defaults.

All other scanners load RS232 defaults.



Metrologic manufactures custom OEM scanners, which load the OEM's defaults. Page 87 will explain how this affects "Metrologic Defaults."

Recall Defaults



CODE TYPES AND DECODE RULES



Bar code descriptions marked with an asterisk (*) define a feature that is a factory default. Bar codes marked with a tilde (~) require the *Multi-Code* configuration method.

UPC/EAN



*** Enable UPC/EAN**



Disable UPC/EAN



*** Enable UPC-A**



Disable UPC-A



*** Enable UPC-E**



Disable UPC-E



*** Enable EAN-13**



Disable EAN-13



*** Enable EAN-8**



Disable EAN-8

CODE TYPES AND DECODE RULES

CODE 128



* **Enable Code 128**



Disable Code 128



Enable UCC/EAN-128 'JC1' Code Formatting -
For Coupon Code 128, see page 15.



* **Disable UCC/EAN – 128 'JC1' Code Formatting**



Ignore <FNC4> Code 128 Characters



* **Use <FNC4> to Determine Extended ASCII Characters**

CODE 39



* **Enable Code 39**



Disable Code 39



Enable MOD 43 Check Digit on Code 39 - The scanner only scans Code 39 bar codes that have a valid Modulo 43 check digit.



* **Disable MOD 43 Check Digit on Code 39**



Enable Full ASCII Code 39



* **Disable Full ASCII Code 39**

CODE TYPES AND DECODE RULES

CODE 39



Enable PARAF (Italian Pharmaceutical Codes) Support - Code 39 bar codes are converted to PARAF format.



* **Disable PARAF Support**



* **Allow PARAF Codes Only**



Allow Non-PARAF Codes



Enable TRI-OPTIC Code



* **Disable TRI-OPTIC Code**



* **Use Standard Code 39 Framing**



Try Code 39 Codes Without 5 Bar Multiples



Enable ITF/Code 39 Filters



* **Disable ITF/Code 39 Filters**



Enable Self-Service Library Code 39



* **Disable Self-Service Library Code 39**



Transmit MOD 43 Check Digit - with Self Service Library Code 39



* **Do Not Transmit MOD 43 Check Digit - with Self Service Library Code 39**

CODE TYPES AND DECODE RULES

2 OF 5 CODES



* **Enable Interleaved 2 of 5 (ITF)**



Disable Interleaved 2 of 5 (ITF)



Enable MOD 10 Check on ITF - The scanner will only scan Interleaved 2 of 5 (ITF) bar codes that have a Modulo 10 check digit.



* **Disable MOD 10 Check on ITF**



Allow ITF Null Characters



* **Do Not Allow ITF Null Characters**



~ **ITF Symbol Length Lock 1** - To specify a 1st ITF symbol length lock, scan this bar code and the appropriate code byte sequence located on page 69.



~ **ITF Symbol Length Lock 2** - To specify a 2nd ITF symbol length lock, scan this bar code and the appropriate code byte sequence located on page 69.



~ **ITF Minimum Symbol Length** - To specify a minimum number of ITF characters to be decoded, scan the appropriate code byte sequence located on page 69.



Alternative ITF 1st Bar Reference



* **Normal ITF 1st Bar Reference**

CODE TYPES AND DECODE RULES

2 OF 5 CODES



Enable Standard 2 of 5



*** Disable Standard 2 of 5**



~ Standard 2 of 5 Symbol Length - To specify a minimum number of characters to be decoded, scan this bar code and the appropriate code byte, scan this bar code and the appropriate code byte sequence located on page 69.



Enable Matrix 2 of 5



*** Disable Matrix 2 of 5**



*** Enable Matrix 2 of 5 Check Digit Requirement**



Disable Matrix 2 of 5 Check Digit Requirement



Enable 15 Digit Airline 2 of 5



*** Disable 15 Digit Airline 2 of 5**



Enable 13 Digit Airline 2 of 5



*** Disable 13 Digit Airline 2 of 5**



Enable Hong Kong 2 of 5



*** Disable Hong Kong 2 of 5**

CODE TYPES AND DECODE RULES

CODABAR



* Enable Codabar



Disable Codabar



Enable Dual Field Codabar



* Disable Dual Field Codabar

CODE 93



* Enable Code 93



Disable Code 93

CODE 11



Enable Code 11



* Disable Code 11



* Check for 1 Code 11 Check Digit



Check for 2 Code 11 Check Digits



* Do Not Check for 2 Code 11 Check Digits



Check for 2 Code 11 Check Digits if Code Length is Greater Than 10 Characters

CODE TYPES AND DECODE RULES

TELEPEN



Enable Telepen



* Disable Telepen



Enable ALPHA Telepen



* Disable ALPHA Telepen

PLESSEY CODES



Enable MSI Plessey



* Disable MSI Plessey



* **No MSI Plessey Check Digit** - Plessey bar codes will not be tested for a check digit.



Enable MSI Plessey MOD 10/10 Check Digit - Test MSI Plessey bar codes for a 2 digit Modulo 10 check digit.



* **Enable MSI Plessey MOD 10 Check Digit** - Test MSI Plessey bar codes for a 1 digit Modulo 10 check digit.



Enable UK Plessey



* Disable UK Plessey



Enabled UK Plessey A to X Conversion



* Disabled UK Plessey A to X Conversion

CODE TYPES AND DECODE RULES

PLESSEY CODES



* **Standard Plessey Stop Characters**



Accept Bad Plessey Stop Characters

ADDITIONAL DECODE FEATURES



Enable Double Border Required / Large Intercharacter Space



* **Disable Double Border Required / Large Intercharacter Space**



Enable Small Border Required



* **Disable Small Border**



~ **Minimum Symbol Length** - Single-line default is 3. Combine this code with the proper code bytes (on page 69), to specify the minimum number of characters in all non-UPC/EAN bar codes.



~ **Symbol Length Lock** - Combine this code with the proper code bytes, to lock the bar code's length into place.



Enable Modulus 8 Filter on Bar & Space Counts



* **Disable Modulus 8 Filter on Bar & Space Counts**



Handle Code 39 Bad Border



* **Disable Code 39 Bad Border**

CODE TYPES AND DECODE RULES

CONFIGURABLE CODE LENGTHS

There are seven bar code lock lengths available. Specific code types can be assigned to a lock length. While in configuration mode:

1. Scan the code *length* lock #1 bar code
2. Scan the three code bytes that represent the code length (page 69).
3. Scan the matching code *type* lock #1 bar code.
4. Scan the three code bytes that represent the code type.

This process can be repeated for lock lengths 2 through 7.



~ Code Length Lock #1



~ Code Type Lock #1



~ Code Length Lock #2



~ Code Type Lock #2



~ Code Length Lock #3



~ Code Type Lock #3



~ Code Length Lock #4



~ Code Type Lock #4



~ Code Length Lock #5



~ Code Type Lock #5

CODE TYPES AND DECODE RULES

CONFIGURABLE CODE LENGTHS



~ Code Length Lock #6



~ Code Type Lock #6



~ Code Length Lock #7.



~ Code Type Lock #7.



Enable Japanese Multi-Field



Disable Japanese Multi-Field

SUPPLEMENTS



Enable Two Digit Supplements



*** Disable Two Digit Supplements**



*** Enable Two Digit Redundancy** - The scanner will scan the bar code plus the 2 digit add on twice before accepting data.



Disable Two Digit Redundancy



Enable Five Digit Supplements



*** Disable Five Digit Supplements**



Enable Five Digit Redundancy - The scanner will scan the bar code plus the 5 digit add on twice before accepting data.



*** Disable Five Digit Redundancy**



Supplements are Required - All UPC/EAN labels that are scanned must have a supplement.



*** Supplements are Not Required**



Enable Remote Supplement Required - MS9500 & MS6200 not supported.



*** Disable Remote Supplement Required** - MS9500 & MS6200 not supported.



Enable Bookland (979) Supplement Required



*** Disable Bookland (979) Supplement Required**

SUPPLEMENTS



Enable Bookland (978) Supplement Required



*** Disable Bookland (978) Supplement Required**



Enable 977 (2 Digit) Supplement Required - The scanner will require a 2 digit supplement to be scanned when an EAN-13 code begins with 977.



*** Disable 977 (2 Digit) Supplement Required**



Enable 378/379 French Supplement Required



*** Disable 378/379 French Supplement Required**



Enable 414/419 German Bookland Supplement Required



*** Disable 414/419 German Bookland Supplement Required**



Enable 434/439 German Supplement Required



*** Disable 434/439 German Supplement Required**



Enable # System 2 Requires Supplements



*** Disable # System 2 Requires Supplements**



Enable UPC # System 5 Requires Supplements



*** Disable UPC # System 5 Requires Supplements**

SUPPLEMENTS



- * **Enable 2 Digit Supplements with 37x, 43x, or UPC # System 5**



Disable 2 Digit Supplements with 37x, 43x, or UPC # System 5



- * **Enable 5 Digit Supplements with 37x, 43x, or UPC # System 5**



Disable 5 Digit Supplements with 37x, 43x, or UPC # System 5



Enable Coupon Code 128



- * **Disable Coupon Code 128**



Enable Code 128 'JC1' Extended Code Format -
The scanner transmits a 'JC1' at the beginning of the Code 128 portion of the coupon code.



- * **Disable Code 128 'JC1' Extended Code Format.**



Enable Code 128 Group Separators - A "GS" (1DH) character will be transmitted with coupon Code 128 codes.



- * **Disable Code 128 Group Separators**



400 msec to Find Supplemental - The scanner will allot 400 milliseconds to *find* an add on after a main UPC/EAN bar code has been scanned.



200 msec to Find Supplemental - The scanner will allot 200 milliseconds to *find* an add on after a main UPC/EAN bar code has been scanned.



- * **100 msec to Find Supplemental -** The scanner will allot 100 milliseconds to *find* an add on after a main UPC/EAN bar code has been scanned.

SUPPLEMENTS



Enable Code ID's with Supplements



*** Disable Code ID's with Supplements**



*** Beep Once on Supplements**



Beep Twice on Supplements



Enable ISBN Check Digit Transmission - Not available with all models.



Disable ISBN Check Digit Transmission



Enable Bookland to ISBN Conversion - Not available with all models.



*** Disable Bookland to ISBN Conversion**



Enable ISBN Re-Formatting



*** Disable ISBN Re-Formatting**



Enable Bookland to ISBN 979 Conversion



*** Disable Bookland to ISBN 979 Conversion**



*** Normal ISBN Re-Formatting**



13 Digit ISBN Re-Formatting

SUPPLEMENTS



Disable Supplementals when CodeGate Button is Pressed - Available for MS9540 scanners only. Requires standard Code Gate be inactive in and out of stand.



* **CodeGate Does Not Affect Supplemental Scanning** - Available for MS9540 scanners only.



No Supplement Checking if EAN-13 Code is just scanned



* **Normal Supplement Checking**

RSS BAR CODE IMPLEMENTATION

Metrologic's MS9520 Voyager® and MS9540 VoyagerCG® laser scanners with software #14810 and higher can be configured to scan RSS type codes.



XT keyboard will no longer be supported in standard software releases with software #14810 or higher. If XT keyboard is needed for your application, software #14806 or lower is required, contact a Metrologic customer service representative at 1-800-ID-METRO for further assistance.



Double Border Required - When scanning RSS bar codes, it is recommended that double border requirements be enabled because of the large spaces often found in RSS symbologies.



Enable RSS 14



*** Disable RSS 14**



*** Transmit RSS 14 Check Digit**



Do Not Transmit RSS 14 Check Digit



*** Transmit RSS 14 Application ID** - Application Identifier "01" is transmitted by default.



Do Not Transmit RSS 14 Application ID



*** Transmit RSS 14 Symbology ID** - Symbology Identifier "je0" is transmitted by default.



Do Not Transmit RSS 14 Symbology

RSS BAR CODE IMPLEMENTATION

RSS LIMITED BAR CODES



Enable RSS Limited



*** Disable RSS Limited**



*** Transmit RSS Limited CD**



Do Not Transmit RSS Limited CD



*** Transmit RSS Limited Application ID -**
Application identifier "01" is transmitted by default.



Do Not Transmit RSS Limited Application ID



*** Transmit RSS Limited Symbology ID -**
Symbology identifier "je0" is transmitted by default.



Do Not Transmit RSS Limited Symbology ID

RSS EXPANDED BAR CODES



Enable RSS Expanded



*** Disable RSS Expanded**



*** Transmit RSS Expanded Symbol ID -** Symbology identifier "je0" is transmitted by default.



Do Not Transmit RSS Expanded Symbol ID

ISBT CODE 128 IMPLEMENTATION

CONFIGURATION MODE BAR CODES



Enable ISBT Code 128



Disable ISBT Code 128

These bar codes are used to enable/disable a special transmit mode as outlined in section 3.5.2 of the ISBT-128 Specification. This output method allows the user to confirm independently the accuracy of the Code-128 check digit.



Enable ISBT Special Transmit



Disable ISBT Special Transmit

These bar codes can be used to disable the transmission of the ISBT Code 128 data identifiers. When this option is selected, the first two data characters are removed from the data stream (ID characters) unless the ISBT bar code scanned contains the Donation Identification Number identifiers. In this instance only the first ID character is removed from the Donation ID Number. The second is regarded as normal data.



Don't Transmit ISBT ID's



*** Transmit ISBT Identifiers**

These bar codes are used to convert and transmit the Mode 37, 2 check digit from the flag digits of the Donation Identification Number provided the check digit is contained in the flag digits. Transmission of the Donation Identification number will be the same except for the last two digits, which are converted into a single check sum character.



Convert Flag Digits to Mod 37, 2 CD



*** Normal Flag Digit Transmission**

ISBT CODE 128 IMPLEMENTATION

CONCATENATION CONFIGURATION MODE BAR CODES

Supported by the MS9500 series only

The following bar codes are used to configure variable time requirements used to find the 2nd bar code of the ISBT concatenation sequence.



100 msec to Find Concatenation Sequence



200 msec to Find Concatenation Sequence



300 msec to Find Concatenation Sequence



400 msec to Find Concatenation Sequence



500 msec to Find Concatenation Sequence



600 msec to Find Concatenation, Sequence



700 msec to Find Concatenation Sequence

PRE-DEFINED CONCATENATION CONFIGURATION MODE BAR CODES

Supported by the MS9500 series only.

The first two barcodes can be used to enable/disable pre-defined concatenation sequences. The remaining bar codes enable the specific enable concatenation sequences and are not needed to enable concatenation. They can be used to disable any selected pre-defined concatenation sequence as well as re-enable it.



Enable Pre-Defined Concatenation Sequence



Disable Pre-Defined Concatenation Sequence



**Donation Identification Number + AB0/Rh (D)
Blood Groups =á + =% Concatenation**



**Donation Identification Number + Donor
Identification Number =á + &; Concatenation**

ISBT CODE 128 IMPLEMENTATION

PRE-DEFINED CONCATENATION CONFIGURATION MODE BAR CODES



Donation Identification Number + Confidential
Unit Exclusion Status =á + &! Concatenation



Product Code + Expiration Date (Form 1)
=< + => Concatenation



Product Code + Expiration Date (Form 2)
=< + &> Concatenation



Product Code + Expiration Date (Form 3)
&< + => Concatenation



Product Code + Expiration Date (Form 4)
&< + &> Concatenation

USER-DEFINED CONCATENATION CONFIGURATION MODE BAR CODES

Supported by the MS9500 series only.

The first two bar codes can be used to enable/disable user-defined concatenation sequences. The remaining bar codes are used to enter the user-defined identifiers used in the concatenation sequence. These bar codes require that the user enter configuration mode first. Then, after scanning the appropriate code, follow the rules for using code bytes to enter the desired identifiers.



Enable User-Defined Sequences



Disable User-Defined Sequences



1st Left Identifier



2nd Left Identifier



1st Right Identifier



2nd Right Identifier

ISBT CODE 128 IMPLEMENTATION

Supported by the MS9500 series only.

The following example demonstrates how to configure the User-Defined ISBT identifiers:

Assume the left-hand identifiers are the ISBT defined donation identification number: “=G”; and the right hand identifiers are country specific identifiers “&a”.

1. Scan the ENTER/EXIT configuration mode bar code.
2. Scan the 1st Left Identifier configuration mode bar code.
3. Scan (Code Byte 0) + (Code Byte 6) + (Code Byte 1).
4. Scan the 2nd Left Identifier configuration mode bar code.
5. Scan (Code Byte 0) + (Code Byte 7) + (Code Byte 1).
6. Scan the 1st Right Identifier configuration mode bar code.
7. Scan (Code Byte 0) + (Code Byte 3) + (Code Byte 8).
8. Scan the 2nd Right Identifier configuration mode bar code.
9. Scan (Code Byte 0) + (Code Byte 9) + (Code Byte 7).
10. Scan the Enable User-Defined Sequence bar Code.
11. Scan the Enable ISBT bar code.
12. Scan the ENTER/EXIT configuration mode bar code.

The scanner is now configured with the appropriate identifiers. Since both ISBT and User-defined Concatenation are enabled, ISBT 128 bar codes scanned successively that contain these identifiers will be concatenated.

An alternate method of the type found in section 4.8.1 of the ISBT specifications can be used for configuring user-defined concatenation sequences. Using the previous example, the identifiers can be configured into a single configuration mode bar code. The following bar codes can be used to enable and disable the user-defined concatenation.

Enable (Left, =G) + (Right, &a)



Disable (Left, =G) + (Right, &a)



These configuration-mode bar codes differ from Metrologic's normal set of configuration mode bar codes and can only be used in single-code configuration mode. In *Multi-Code* configuration mode, these bar codes are not recognized.

Two forms of concatenation can be enabled at any given time - one pre-defined sequence and the User-defined sequence. Code selects and ISBT Code-128 concatenation cannot be used simultaneously. Both functions use the same internal resources so they must remain mutually exclusive.

COMMUNICATIONS



Enable Light Pen/Wand Communication - Use this option if scanner should be used in place of a light pen.



* **Enable RS232** - The scanner will work with RS232 +/- 12V serial output.



Load Keyboard Wedge Defaults - Scan this code before selecting Normal or Stand Alone Wedge Mode.



Enable Stand-Alone Keyboard Scanner - Allows scanner to be used without an external keyboard.



Enable Keyboard Wedge Emulation - Select if the scanner provides keyboard emulation by converting the scanned bar code data to the PC keyboard scan code equivalent.



Load OCIA Defaults - Scan this code before selecting Enable OCIA output.



Enable OCIA Output - Select this option if the communications requirement is on Optically Coupled Interface Adapter (OCIA). This is a docked (by the host) serial interface.



Load IBM 46xx Defaults



Enable IBM 46xx Communication - Select this option for IBM 46xx SIOC/RS485 communications. Not all scanners support this interface. The correct interface board is required.



Enable No Communication Mode - Select this option if the scanner does not interface with the host device.



Reserved



Reserved

SCANNER OPERATION

CONFIGURATION MODE OPTIONS



Allow Configuration Mode on Power Up - the scanner can only enter MetroSet mode before any bar codes are scanned.



* **Allow Configuration Mode Anytime** - Allow MetroSet configuration at any time.



Allow configuration Codes on Power Up - Once a product bar code is scanned after power-up, the scanner will not accept configuration bar codes.



* **Allow Configuration Codes Anytime** - Allows scanning of configuration bar codes at any time.

SCAN BUFFERS



* **1 Scan Buffer** - The scanner will scan one bar code in the scan field and not scan again until the bar code is removed from the scan field for the duration of the same symbol time out.



2 Scan Buffers - The scanner will scan 2 bar codes in the scan field one time each. These 2 bar codes will not be scanned again and until they are removed from the scan field for the duration of the same symbol time out.



3 Scan Buffers - Same function as 2 Scan Buffers, but 3 bar codes are in the scan field.



4 Scan Buffers - Same function as 2 Scan Buffers, but 4 bar codes are in the scan field.

SCANNER OPERATION

REDUNDANT SCANS



* **0 Redundant Scans** - Requires 1 good decode for a *good scan*.



1 Redundant Scan - Requires 2 consecutive decodes of the same bar code data for a *good scan*.



2 Redundant Scans - Requires 3 consecutive decodes of the same bar code data for a *good scan*.



3 Redundant Scans - Requires 4 consecutive decodes of the same bar code data for a *good scan*.



4 Redundant Scans - Requires 5 consecutive decodes of the same bar code for a *good scan*.



5 Redundant Scans - Requires 6 consecutive decodes of the same bar code for a *good scan*.



6 Redundant Scans - Requires 7 consecutive decodes of the same bar code for a *good scan*.



7 Redundant Scans - Requires 8 consecutive decodes of the same bar code for a *good scan*.

MISCELLANEOUS DECODE FEATURES



* **Optional Same Symbol Check** - Requires 1 different character between successive bar codes to consider the bar code “new”.



Normal Same Symbol Check - Requires 3 different characters between successive bar codes to consider the bar code “new”.

SCANNER OPERATION

SAME SYMBOL TIME OUTS

The length of time before a bar code can be rescanned after it is removed from the scan field is user-configurable in increments of 50 msecs to 6350 msecs (6.35 sec).

If using an MS9500 or IS4125, please go to page 78.



~ **Variable Same Symbol Time Out** - In configuration mode, scan this bar code followed by the appropriate code byte sequence (on page 69) to set the same symbol time out duration. This feature is not supported for the MS9500 or IS4125, refer to page 78 for additional information.



No Same Symbol Time Out



Infinite Same Symbol Time Out - The scanner will not repetitively scan the same bar code. This option overrides the symbol rescan time-outs.



Enable 2 Second Time Out - after 2 seconds of inactivity the laser will turn off and stay off until the CodeGate button is pressed. *This feature is for the MS5145 only.*



Disable 2 Second Time Out

LED OPTIONS



Flash Green LED if Rescan Allowed - This indicates same symbol timeout has elapsed.



* **Do Not Flash Green LED if Rescan Allowed**



Reverse LED Functions - Red = Laser On
Green = Good Read



* **Normal LED Functions** - Green = Laser On
Red = Good Read

SCANNER OPERATION

BEEPER OPTIONS



* Normal Tone



Optional Tone 1



Optional Tone 2



Optional Tone 3



Optional Tone 4



Optional Tone 5



Optional tone 6



No Beep



* Beep Once on Supplements



Beep Twice on Supplements



Enable Fast Beep



* Disable Fast Beep



Beep on BEL Command - The scanner beeps when it receives a BEL character from the host. If a number is sent within 200 msec before the BEL character, the scanner will beep that number of times.

SCANNER OPERATION

BEEPER OPTIONS



* **Ignore BEL Command**



Enable Light Pen Toggle During Beep - The scanner beeps and toggles the light pen data line on a successful decode. This drives a good read indicator.



* **Disable Light Pen Toggle During Beep**



Enable Pass-Through



Disable Pass-Through



Beep with Pass-Through Data



* **No Beep with Pass-Through Data**



Enable Record Count Capture



* **No Record Count Capture**



Transmit Record Counts

SCANNER OPERATION

DATA TRANSMISSION DELAYS

Use these codes to select the amount of delay between sending data characters from the scanner to the host. This helps prevent the scanner from overflowing host-input buffers.



* **1 msec Intercharacter Delay**



10 msec Intercharacter Delay



25 msec Intercharacter Delay



~ **Variable msec Intercharacter Delay** - Scan this bar code and a sequence of code bytes (on page 69) to set the delay between characters sent to the host system (range from 1 to 255 msec.).



No Intercharacter Delay



~ **Variable Inter-Record Delay**



Turn Off Laser During Inter-Record Delay



* **Leave Laser On During Inter-Record Delay**

SCANNER OPERATION

COMMUNICATION TIME OUT OPTIONS



Enable Communications Time Out



* Disable Communications Time Out



* Beep Before Transmit



Beep After Transmit



~ Variable Communications Time Out



* Default Communications Time Out (2 secs)



Short Communications Time Out (1 secs)



Long Communications Time Out (4 secs)



Three Beeps on Time Out



* No Beeps on Time Out



Razzberry Tone on Time Out



* No Razzberry Tone on Time Out

SCANNER OPERATION

HOST SCANNER COMMANDS



Enable D/E Disable Command. - The scanner will disable scanning after it receives an ASCII "D" from the host device. It will enable scanning when it receives an ASCII "E".



* **Disable D/E Disable.**



Enable Z/R Type D/E Simulation - The scanner will disable scanning after it receives an ASCII "Z" from the host device. It will enable scanning when it receives an ASCII "R".



* **No Z/R Type D/E Simulation**



Enable F/L Laser Command - The scanner will turn *off* the laser after the scanner receives an ASCII "F" character. The laser will turn *on* after it receives an ASCII "L" character.



* **Disable F/L Laser Command**



Use DTR Scan Disable - The scanner will monitor the DTR input to determine if scanning should be allowed. A +12V "active" level enables decoding. A -12V "inactive" level disables decoding.



* **Do Not Use DTR Scan Disable** - Do not monitor the DTR input.



Activate DC2 Character - Scanning will be initiated with the receipt of a DC2 character (^R, 124).



* **Do Not Activate on DC2 Character**



Transmit "METROLOGIC" with receipt of an "I" (49H) via RS232



* **Don't Transmit "METROLOGIC" with receipt of an "I"** (49H) via RS232

SCANNER OPERATION

HOST SCANNER COMMANDS



Transmit Scanner ID byte with receipt of an "i" (69H) via RS232 - The ID byte is transmitted as 3 bytes (i.e. 0, 0, 1).



* Don't Transmit Scanner ID byte with receipt of an "i" (69H) via RS232



Transmit "NO READ" if DC2 Activated



* Do Not Transmit "NO READ" if DC2 Activated



No Green LED During "NO READ" Transmit



* Green LED During "NO READ" Transmit



Transmit Serial Number



Enable Motor On/Off Commands



* Disable Motor On/Off Commands



Disable RS232 Receive



Normal RS232 Receive



Enable Banco Control Mode



Disable Banco Control Mode

SCANNER OPERATION

HOST SCANNER COMMANDS



Use Protocol Prefix and Suffix for Bar Code Transmission



*** No Protocol Prefix and Suffix for Bar Code Transmission**



Enable RTS on No Read – After a NOREAD occurs, the scanner will activate the RTS line for 20 milliseconds. The duration of the RTS activation can be loaded in address 199 bits 6 - 0 in 10 millisecond steps.



*** Disable RTS on No Read**

TEST MODES



Scanability ON - This option enters scanability test mode. *Do not enable unless instructed by a Metrologic representative.*



*** Scanability OFF**



Scan Count Mode ON - The scanner will enter scan count test mode and the scanner's firmware number will transmit to the host. *Do not enable unless instructed by a Metrologic representative.*



*** Scan Count Mode OFF.**

PREFIXES/SUFFIXES



Scan the *Enter Configuration Mode* bar code before trying to set these features (see the *Multi-Code Method* on page 2).

USER CONFIGURABLE PREFIXES, ALL DATA



~ **Configurable Prefix Character #1** - A prefix ID can be added and assigned for data transmission. Use this code with a code byte sequence (on page 69) that represents the desired character.



~ **Configurable Prefix Character #2** - Assigns a second configurable prefix character.



~ **Configurable Prefix Character #3** - Assigns a third configurable prefix character.



~ **Configurable Prefix Character #4** - Assigns a fourth configurable prefix character.



~ **Configurable Prefix Character #5** - Assigns a fifth configurable prefix character.



~ **Configurable Prefix Character #6** - Assigns a sixth configurable prefix character.



~ **Configurable Prefix Character #7** - Assigns a seventh configurable prefix character.



~ **Configurable Prefix #8** - Assigns an eighth configurable prefix character.



~ **Configurable Prefix Character #9** - Assigns a ninth configurable prefix character.



~ **Configurable Prefix Character #10** - Assigns a tenth configurable prefix character.



* **Clear All User Configurable Prefixes**

PREFIXES/SUFFIXES

USER CONFIGURABLE ID CHARACTERS, CODE SPECIFIC



- * **Use Configurable Code ID Bytes as Prefixes** - User configured, code specific ID bytes are transmitted before the data. If using prefixes, user configured suffixes can not be used.



- Use Configurable Code ID Bytes as Suffixes** - User configured, code specific ID bytes are transmitted after the data. If using suffixes, user configured prefixes can not be used.

‡ Enter configuration mode then scan this bar code followed by the three code byte bar codes (on page 69) that represent a unique ID character to be associated with this bar code type.



- ~ **Configurable UPC-A ID ‡**



- ~ **Configurable UPC-E ID ‡**



- ~ **Configurable EAN-8 ID ‡**



- ~ **Configurable EAN-13 ID ‡**



- ~ **Configurable Code 39 ID ‡**



- ~ **Configurable Code 128 ID ‡**



- ~ **Configurable Code 93 ID ‡**



- ~ **Configurable Code 11 ID ‡**



- ~ **Configurable Telepen ID ‡**

PREFIXES/SUFFIXES

USER CONFIGURABLE ID CHARACTERS, CODE SPECIFIC

‡ Enter configuration mode then scan this bar code followed by the three code byte bar codes (on page 69) that represent a unique ID character to be associated with this bar code type.



~ Configurable TRI-OPTIC ID ‡



~ Configurable Standard 2 of 5 ID ‡



~ Configurable Interleaved 2 of 5 ID ‡



~ Configurable Matrix 2 of 5 ID ‡



~ Configurable Airline 2 of 5 ID ‡



~ Configurable MSI Plessey ID ‡



~ Configurable UK Plessey ID ‡



~ Configurable Codabar ID ‡



* **Clear All Configurable Code Specific ID's -**
Clears all unique ID characters previously identified.



Enable Teraoka ID



* **Disable Teraoka ID**



Enable Taiwan 7-11 ID



* **Disable Taiwan 7-11 ID**

PREFIXES/SUFFIXES

STANDARD PREFIX CHARACTERS



Enable STX Prefix - The scanner will transmit a Start of TeXt (ASCII 02H) before each bar code.



* **Disable STX Prefix**



Enable Rochford-Thomson Mode



* **Disable Rochford-Thomson Mode**



Enable AIM ID Characters



* **Disable AIM ID Characters**



Enable UPC Prefix ID - The scanner will transmit a prefix before any UPC/EAN bar code. The prefixes are A (UPC-A), E0 (UPC-E), F (EAN-13), and FF (EAN-8).



* **Disable UPC Prefix ID.**



Enable NCR Prefix ID - The scanner will transmit a prefix before the following code types. The prefixes are as follows: A (UPC-A), E0 (UPC-E), FF (EAN-8), F (EAN 13), B1 (Code 39) B2 (ITF), B3 (Code 128 and other codes).



* **Disable NCR Prefix ID**



Enable NCR Prefix Character



Enable Nixdorf ID Characters - This option transmits code identities before each bar code for many Siemen/Nixdorf registers.



* **Disable Nixdorf ID Characters**

PREFIXES/SUFFIXES

STANDARD PREFIX CHARACTERS



Enable SANYO ID Characters



* Disable SANYO ID Characters



Enable Manufacturer ID Prefix - Transmits
“METROLOGIC” before all bar code data.



* Disable Manufacturer ID Prefix



Enable “C” Prefix



* Disable “C” Prefix



Enable “\$” Prefix ID for UPC/EAN



* Disable “\$” Prefix ID for UPC/EAN



Enable Tab Prefix - The scanner will transmit a
TAB (ASCII 09H) before each bar code.



* Disable Tab Prefix



Enable SNI Beetle Mode



* Disable SNI Beetle Mode



Enable Cipher 1021 IDs



* Disable Cipher 1021 IDs

PREFIXES/SUFFIXES

STANDARD SUFFIX CHARACTERS



* **Enable CR Suffix** - The scanner transmits a carriage return after each bar code.



Disable CR Suffix.



* **Enable LF Suffix** - The scanner transmits a line feed after each bar code. *Disabled when keyboard wedge defaults are loaded.*



Disable LF Suffix.



Enable Tab Suffix - The scanner will transmit a TAB (ASCII 09H) after each bar code.



* **Disable Tab Suffix**



Enable ETX Suffix - The scanner will transmit End of TeXt (ASCII 03H) after the bar code date.



* **Disable ETX Suffix**



Enable UPC Suffix ID - The scanner will transmit a suffix after any UPC/EAN bar code. The suffixes are A (UPC-A), E (UPC-E), F (EAN-13) and F (EAN-8).



* **Disable UPC Suffix ID**



Enable NCR Suffix Character



Enable Tec 7-11 IDs



* **Disable Tec 7-11 IDs**

PREFIXES/SUFFIXES

LONGITUDINAL REDUNDANCY CHECK

A Longitudinal Redundancy Check (LRC) is an error checking character that is calculated across a sequence of data characters. It is determined by eXclusive ORing (XOR) the characters to be checked, starting with an initial value of 00H.

The result, an "LRC byte" is then transmitted following the data stream and used by the receiving computer to determine if the information was received correctly. In the scanner's case, XOR is performed prior to adding parity bits.

When the LRC is enabled, the scanner defaults to starting the LRC on the second byte of information transmitted. Optionally, the calculation can start on the first byte transmitted.



Enable Transmit of LRC Calculation - The scanner outputs on LRC check character after the bar code.



* **Disable Transmit of LRC Calculation.**



* **Start LRC on First Byte** - The scanner will calculate the LRC check digit starting with the first character.



Start LRC on Second Byte - The scanner will calculate the LRC check digit starting with the second character.

BLOCK CHECK CHARACTER



* **Enable NCR BCC**



Disable NCR BCC

PREFIXES/SUFFIXES

CHARACTER REPLACEMENTS

To replace a character:

1. Scan the *enter/exit configuration mode* bar code (on page 2).
2. Scan the *character to replace code* (shown below).
3. Scan the ASCII code byte value of the character you wish to replace (refer to the ASCII Reference Table in the Code Byte Usage section of this manual).
4. Scan the *replacement character* bar code (shown below).
5. Scan the ASCII code byte value of the replacement character.
6. Scan the *enter/exit configuration mode* bar code (on page 2).



~ **Character to Replace**



~ **Replacement Character**



No Replacement

PREFIXES/SUFFIXES

USER CONFIGURABLE SUFFIXES, ALL DATA

Note: Scan the *Enter/Exit Configuration mode* code before trying to set this feature. Refer to *Multi-Code Method* on page 2.



~ **Configurable Suffix Character #1** - A suffix ID can be added and assigned for data transmission. Use this code with a 3 code byte sequence (on page 69) that represents the desired character.



~ **Configurable Suffix Character #2** - Assigns a second configurable suffix character.



~ **Configurable Suffix Character #3** - Assigns a third configurable suffix character.



~ **Configurable Suffix Character #4** - Assigns a fourth configurable suffix character.



~ **Configurable Suffix Character #5** - Assigns a fifth configurable suffix character.



~ **Configurable Suffix Character #6** - Assigns a sixth configurable suffix character.



~ **Configurable Suffix Character #7** - Assigns a seventh configurable suffix character.



~ **Configurable Suffix Character #8** - Assigns an eighth configurable suffix character.



~ **Configurable Suffix Character #9** - Assigns a ninth configurable suffix character.



~ **Configurable Suffix Character #10** - Assigns a tenth configurable suffix character.



* **Clear All User Configurable Suffixes**

PREFIXES/SUFFIXES

SPECIAL FORMATS



Enable SINEKO Mode



*** Disable SINEKO Mode**



Enable Newcode Formatting Mode A



*** Disable Newcode Formatting Mode A**



Enable Newcode Formatting Mode B



*** Disable Newcode Formatting Mode B**



Remove All Leading Zero's



*** Do Not Remove Leading Zero's**



Enable MS951 CAPS Lock



*** Disable MS951 CAPS Lock**



Enable HCA Parsing



Disable HCA Parsing

CODE FORMATTING

UPC/EAN FORMATTING



* Transmit UPC-A Check Digit



Do Not Transmit UPC-A Check Digit



Transmit UPC-E Check Digit



* Do Not Transmit UPC-E Check Digit



Expand UPC-E to 12 Digits - Expand UPC-E bar codes to the 12 digit equivalent, UPC-A bar codes.



* Do Not Expand UPC-E to 12 Digits



* Send Number System on Expanded UPC E



Do Not Send Number System on Expanded UPC E



Enable GTIN Formatting



* Disable GTIN Formatting



Convert UPC-A to EAN-13 - The scanner converts UPC-A to EAN-13 by transmitting a leading zero before the bar code.



* Do Not Convert UPC-A to EAN-13

CODE FORMATTING

UPC/EAN FORMATTING



Transmit Lead Zero on UPC-E - This option will transmit a zero before each UPC-E bar code.



* **Do Not Transmit Lead Zero on UPC-E**



Convert EAN-8 to EAN-13 - The scanner will transmit five zeros before the bar code to convert EAN-8 to EAN-13.



* **Do Not Convert EAN-8 to EAN-13**



* **Transmit UPC-A Number System**



Do Not Transmit UPC-A Number System



* **Transmit UPC-A MFR #**



Do Not Transmit UPC-A MFR #



* **Transmit UPC-A ITEM #**



Do Not Transmit UPC-A ITEM #



* **Transmit EAN-8 Check Digit**



Do Not Transmit EAN-8 Check Digit



* **Transmit EAN-13 Check Digits** - The scanner will transmit EAN-13 Check Digit.



Do Not Transmit EAN-13 Check Digit.

CODE FORMATTING

CODABAR FORMATTING



Transmit Codabar Start/Stop Characters -
Transmits Codabar's Start/stop characters before and after each bar code.



*** Do Not Transmit Codabar Start/Stop**



*** Normal Codabar Start/Stop Characters**



Enable Transmit Codabar Start/Stop Characters as Lower Case Characters



Enable CLSI Editing - Works only with 14 digit Codabar type lengths. This option will perform CLSI type editing before the information is transmitted to the host.



*** Do Not Enable CLSI Editing**



Enable Codabar Mod-16 Check Digit



*** Disable Codabar Mod-16 Check Digit**



Enable Codabar "7-Check" Check Digit



*** Disable Codabar "7-Check" Check Digit**



*** Transmit Codabar Check Digit**



Don't Transmit Codabar Check Digit

CODE FORMATTING

CODE 39 FORMATTING



Transmit Mod 43 Check Digit on Code 39 - This feature works in conjunction with Mod 43 *Check Digit on Code 39* option, on page 4. Both must be enabled for this feature to work.



* **Do Not Transmit Mod 43 Check Digit on Code 39**



Transmit Code 39 Stop/Start Characters - The scanner transmits Code 39's start and stop characters before and after each bar code.



* **Do Not Transmit Code 39 Stop/Start Characters.**



Transmit an "A" (41H) Prefix if Italian Pharmaceutical.



* **Do not Transmit an "A" (41H) Prefix if Italian Pharmaceutical**

CODE 11 FORMATTING



Transmit Code 11 Check Digit - This bar code will transmit Code 11 check characters when used with *Enabled Code 11* on page 8.



* **Do Not Transmit Code 11 Check Digit**

TELEPEN



Enable Convert Telepen ^L to E



* **Disable Convert Telepen ^L to E**

CODE FORMATTING

PLESSEY



Transmit UK Plessey Check Digit - The scanner will transmit UK Plessey Check Digit characters and must be used with the UK Plessey option.



*** Do Not Transmit UK Plessey Check Digit**



Enable UK Plessey Special Format



Disable UK Plessey Special Format



Transmit MSI Plessey Check Digit - This option works in conjunction with one or both of the Enabled MSI Plessey Mod options on page 9.



*** Do Not Transmit MSI Plessey Check Digit**

2 OF 5 CODE FORMATTING



Transmit Mod 10 Check Digit on ITF - The scanner transmits interleaved 2 of 5 (ITF) Mod 10 check character.



*** Do Not Transmit Mod 10 Check Digit on ITF** - Works in conjunction with Mod 10 check on ITF. Both must be enabled for this feature to work.



Transmit Matrix 2 of 5 Check Digit



*** Do Not Transmit Matrix 2 of 5 Check Digit**

RS232



* **Enable RS232 Mode** - the scanner will work with RS232 +/-12V serial output.

PARITY FEATURES

A parity bit is an extra data bit used to help catch data transmission errors. The scanner's parity must match the host's parity.



No Parity



Odd Parity - Select to set the parity bit to either a 1 or a 0 to ensure an odd number of bits are 1's.



* **Space Parity** - Select to set the parity bit always 0.



Even Parity - Select to set the parity bit to either a 1 or 0 to ensure an even number of bits are 1's.



Mark Parity - Select Mark Parity to set the parity bit always 1.

BAUD RATE



115200 BAUD Rate
(Not available with Voyager)



57600 BAUD Rate
(Not available with Voyager)



38400 BAUD Rate



19200 BAUD Rate



14400 BAUD Rate



* **9600 BAUD Rate**



4800 BAUD Rate

RS232

BAUD RATE



2400 BAUD Rate



1200 BAUD Rate



600 BAUD Rate



300 BAUD Rate

DATA/STOP BITS



8 Data Bits - The number of data bits transmitted for each character.



* **7 Data Bits**



1 Stop Bit



* **2 Stop Bits**

HARDWARE HANDSHAKING



Enable RTS/CTS Handshaking - Output a *Request to Send* (RTS) signal and wait for a *Clear to Send* (CTS) signal before transmitting data.



* **Disable RTS/CTS Handshaking.**



* **Character RTS/CTS** - Activates/Deactivates RTS signal for each character.



Message RTS/CTS - Activates RTS before sending the first character and leaves it active until after the last character has been transmitted.

RS232

HARDWARE HANDSHAKING



Invert RTS Polarity (RSV1)

-12V = Active +12V = Inactive



* **Standard RTS Polarity** - Use standard RTS polarity

-12V = Inactive +12V = Active



Invert CTS Polarity (RSV2)

-12V = Active, +12V = Inactive,
 OK to send Do not send



* **Standard CTS Polarity**

-12V = Inactive, +12V = Active,
 Do not send OK to send



Activate RTS, Do Not Wait for CTS (RSV3) -

Activate RTS for transmission but do not wait for CTS to send.



* **Activate RTS, Wait for CTS** - Wait for CTS after activating RTS.



Test CTS Not Present Before RTS (RSV4) - Do not activate RTS if CTS is already present.



* **Do Not Test for CTS Present Before RTS**



Enable DTR Support - The scanner will stop scanning when the *Data Terminal Ready* (DTR) signal goes inactive.



* **Disable DTR Support**



Enable RTS Counter Toggle - The scanner will toggle the RTS line on a good decode.



* **Disable RTS Counter Toggle**



Enable XON/XOFF Handshaking - The scanner will stop transmission whenever on XOFF (ASCII 13H) is received. Transmission will resume after an XON (ASCII 11H) is received.



* **Disable XON/XOFF Handshaking.**

RS232

SOFTWARE HANDSHAKING



Enable ACK/NAK - After transmitting data, wait for an ACK (06H) or a NAK (15H) response from the host. If ACK is received, complete the communications cycle and look for more bar codes. If NAK is received, retransmit the last set of bar code data and wait for ACK/NAK again.



* **Disable ACK/NAK**



Support BEL/CAN in ACK/NAK - When BEL (07H) is received, the scanner beeps 3 times and exits the communications loop. If a CAN (18H) is received, then the scanner will exit the communications loop, silently.



* **Ignore BEL/CAN in ACK/NAK** - Ignore BEL/CAN characters in communication loop.



Enable 5 Retries on ACK/NAK Time Out - Allow up to 5 NAK retransmissions of the data before dropping out of the communications loop.



* **Disable 5 Retries on ACK/NAK Time Out**



Enable 5 NAK Retries
Allow up to 5 retransmissions of the data if a NAK is received.



* **Disable 5 NAK Retries**



Enable GLS Handshaking – Accept JV for the ACK acknowledgement. ACK will no longer be accepted but NAK and any additional ACK/NAK protocol characters enabled are still accepted.



* **Disable GLS Handshaking**

RS232

MISCELLANEOUS



Enable French PC Term - The scanner transmits PC type make/break scan codes instead of ASCII data characters. The scan codes match a WYSE French PC Term.



* **Disable French PC Term**



Enable NCR Scanner – Only Commands



* **Disable NCR Scanner – Only Commands**

KEYBOARD

ENABLE KEYBOARD EMULATION



Load Keyboard Wedge Defaults - Loads the default settings for keyboard wedge mode.



Enable Stand-Alone Keyboard Emulation - Use this with special stand-alone models that are not cabled for an external keyboard. Scan this bar code to enable the Stand-Alone Mode. The scanner will send keyboard “power on” information and configure hardware to simulate a constant keyboard connection.



* **Enable Keyboard Wedge Emulation** - Use this with an external keyboard. Transmit in wedge mode to allow standard PC keyboards to communicate when no bar code data is available.

COUNTRY/SCAN CODE TABLE SELECTS



* **USA Keyboard**



Switzerland Keyboard



Spain Keyboard



Italy Keyboard



Germany Keyboard



France Keyboard



UK Keyboard

KEYBOARD

COUNTRY/SCAN CODE TABLE SELECTS



Belgium Keyboard



Japan Keyboard



IBM 4700 Financial Keyboard



Sweden/Finland Keyboard



Slovenian Keyboard

KEYBOARD/SYSTEM TYPE



* **AT Keyboard** - Includes IBM PS/2 and compatible models 50, 55, 60, 80.



XT Keyboard - Special firmware in Voyager.



PS/2 Keyboard - Includes IBM PC and compatible models 30, 70, 8556.



Enable Terminal Keyboard Emulation.



Enable XT Keyboard for Mode 1 - Special firmware in Voyager.



Enable XT Keyboard for Mode 2 - Special firmware in Voyager.

KEYBOARD

'DUMB' TERMINAL SELECTIONS

Note: The following terminals may require custom cables.



IBM Terminal Keyboards



Reserved Terminal Keyboard #2



Reserved Terminal Keyboard #3



Reserved Terminal Keyboard #4



Reserved Terminal Keyboard #5



Reserved Terminal Keyboard #6



Reserved Terminal Keyboard #7



Reserved Terminal Keyboard #8



Lower Case Lock On - transmit all data as lower case.



* **Lower Case Lock Off**



Spanish Keyboard Ñ Substitution – the following two characters will translate as follows: # to Ñ and ^ to ñ.



* **No Spanish Keyboard Ñ Substitution**

KEYBOARD

SPECIAL KEYBOARD FEATURES



Transmit Make Code Only - Not available on all models.



* **Transmit Make/Break Code** - Not available on all models.



* **Transmit FOH Break Code** - The scanner will transmit the FOH in the break-code sequence.



Do Not Transmit FOH Break Code



Transmit Cleanup Bit - Use for certain NEC computers.



* **Do Not Transmit Cleanup Bit**



Enable Alt-Mode - see *Enable ALT-Mode (Normal)* for description.



* **Disable Alt-Mode** - Caution: If host software application uses the right Alt key as a "Hot" key, Alt mode must be disabled.

† These settings only apply if the Alt-Mode (shown above) is enabled.



* **Enable Alt-Mode (Normal)** †
The scanner will duplicate the following keyboard sequence; *Hold down the Alt key and Type the 3 digit decimal number that corresponds to the appropriate character.*



Enable Alt-Mode (Advanced) †
The scanner will duplicate the following keyboard sequence; *Hold down the Alt key and Type the 4 digit decimal number that corresponds to the appropriate character.*



Enable Auto Detect Mode (AT/PS2) - Automatically detects caps lock status.



* **Disable Auto Detect Mode (AT/PS2)**

KEYBOARD

SPECIAL KEYBOARD FEATURES



Enable Caps Lock (XT)



*** Disable Caps Lock (XT)**



Send Numbers as Keypad Data - All data is sent as if it has been entered on a keypad.



*** Send Numbers as Normal Data**



Enable Reserved Feature



*** Disable Reserved Feature**



*** Use Extended ASCII To Send Extended Key Codes** - Use extended ASCII characters to send PC keyboard keys such as F1, F2, etc...



Use Extended ASCII Characters as Extended ASCII> - Transmit extended ASCII codes via Alt Mode.



*** Character KB Inhibit**



Message KB Inhibit



Enable Right Alt Key Sequencing



Disable Right Alt Key Sequencing



Enable LaCaixa Special Keyboard Prefix & Suffix Scan Codes



*** Disable LaCaixa Special Keyboard Prefix & Suffix Scan Codes**

KEYBOARD

INTERSCAN CODE DELAYS



* **InterScan Code Delay 800 msec** - The time specified represents the amount of time between individual 11 bit-scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.



InterScan Code Delay 7.5 msec - This time specified represents the amount of time between individual 9 bit-scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.



InterScan Code Delay 15 msec - The time specified represents the amount of time between individual 11 bit-scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.



~ **Variable InterScan Code Delay msec** - Refer to *Multi-Code Method* on page 2. Sets value in 100 microsecond increments.

CONTROL SETS

In general, standard bar code symbologies will only encode the ASCII character set. Function keys, arrow keys and many other extended keys on an IBM compatible keyboard do not translate to ASCII characters. One method of 'bar coding' the extended keys is to substitute the extended key codes when a specific ASCII control character is found in the bar code stream. The Control Sets are specific translations of the ASCII (HEX) set.

Control Set #1



Enable Control Set #1



* **Disable Control Set #1**

KEYBOARD

Control Set #1

| ASCII (HEX) | ASCII Control | Extended Key |
|-------------|---------------|--------------------------|
| 00H | Null | Numeric Keypad + (Plus) |
| 01H | SOH | Num Lock |
| 02H | STX | Down Arrow |
| 03H | ETX | Numeric Keypad - (Minus) |
| 04H | EOT | Insert |
| 05h | ENQ | Delete |
| 06H | ACK | System Request |
| 07H | BEL | ➔ (Right Arrow) |
| 08H | BS | ➤ (Left Arrow) |
| 09H | TAB | Tab |
| 0AH | LF | Caps Lock |
| 0BH | VT | Shift Tab |
| 0CH | FF | Left Alt |
| 0DH | CR | Enter |
| 0EH | SO | Left Control |
| 0FH | SI | Up Arrow |
| 10H | DLE | F1 |
| 11H | DC1 | F2 |
| 12H | DC2 | F3 |
| 13H | DC3 | F4 |
| 14H | DC4 | F5 |
| 15H | NAK | F6 |
| 16H | SYN | F7 |
| 17H | ETB | F8 |
| 18H | CAN | F9 |
| 19H | EM | F10 |
| 1AH | SUB | Home |
| 1BH | ESC | Esc |
| 1CH | FS | Page Up |
| 1DH | GS | Page Down |
| 1EH | RS | Print Screen |
| 1FH | US | End |

OCIA



Enable OCIA Mode - Select this option if communications requires OCIA (Optically Coupled Interface Adapter). The host clocks this serial interface.



Load OCIA Defaults



Enable DTS/Siemens



* **Enable DTS/Nixdorf**



Enable NCR-S



Enable NCR-F



* **Transmit character count with non-UPC codes while transmitting in OCIA NCR-S mode**



Do not Transmit character count with non-UPC codes while transmitting in OCIA NCR-S mode

LIGHT PEN PARAMETERS



Enable Light Pen Mode - Select this option if the scanner will be used in place of a light pen. It provides light pen emulation of each bar code scanned.



* **Bars High**



Spaces High



Transmit as Code 39 - All bar codes will be decoded then transmitted as Code 39 bar codes.



* **Transmit as Scanned** - All bar codes will be decoded and transmitted in that symbology.



Poll Light Pen Source - The scanner waits for an active source voltage before transmitting data.



* **Do Not Poll Light Pen Source.**



Enable Inverted IDLE/Extra Toggle - The scanner beeps and toggles the light pen data line with an extra data pulse to condition the decoder.



* **Disable Inverted IDLE/Extra Toggle.**



Enable Pre-Transmit Toggle of RTS Line



* **Disable Pre-Transmit Toggle of RTS Line**

LIGHT PEN PARAMETERS

SET NARROW ELEMENT WIDTH



10x Narrow Element Border - Allows the transmission of Light Pen/Wand emulation using a 10x border.



* **50x Narrow Element Border** - Allows the transmission of Light Pen/Wand emulation using a 50x border.



* **1 ms Narrow Element Width** - Allows the transmission of Light Pen/ Wand emulation at 1ms Narrow Element width.



60 μs Narrow Element Width



100 μs Narrow Element Width



500 μs Narrow Element Width



~ **Variable Narrow Element Width** - Sets the minimum x-dimension in 6 μs increments. Scan this code followed by a 3-digit code byte sequence (on page 69).

MS9520/9540-00 LASER EMULATION MODE

ENABLE HANDHELD LASER EMULATION MODE

The MS9520-00 and MS9540-00 leave the factory with Laser Emulation interface enabled.

If you recall defaults while re-configuring your scanner, scan the following barcode to re-enable the Laser Emulation interface. The scanner you are using must be labeled as an MS9520-00 or MS9540-00 to support this feature.

Enable HH Laser Emulation



If host controlled laser emulation is required scan the following bar code after scanning the Enable HH Laser Emulation bar code.

Enable Host Controlled Laser Emulation



Normal Laser Emulation Motor Idle State



Reverse Laser Emulation Motor Idle State

IBM® 46XX CONFIGURATION

IBM PORT



Enable IBM 46xx Communication - For IBM 46xx SIOC/RS485 communications. Not all scanners support this interface. The correct interface board is required.



Load 46xx IBM Defaults - Load default format settings for the IBM 46xx systems.



IBM Port 17B 3687-2 In Counter



IBM Port 5B 1520 HH Laser



* **IBM Port 9B 4500 CCD HH BCR1**



IBM Port 9B 4501 CCD HH BCR2



* **Disable CTS select of IBM 46xx vs RS232**



Enable IBM 46xx transmit when CTS = -12 Volt & RS232 transmit when CTS = +12 Volt

IBM RESERVED CODES



IBM Reserved #1



IBM Reserved #2



IBM Reserved #3



IBM Reserved #5

USB

‡ **When used with the MS9500 series**, the following codes will enable communication with an MX009 converter cable.

OR

‡ **If used with an MS5145**, these codes will enable direct USB communication without the use of an MX009 converter cable.



Enable USB Interface ‡



Enable Low Speed USB Defaults ‡



**Enable MX009-Full Speed RS232
Communication with Full Speed IBM OEM USB**



Load Integrated Full Speed USB Defaults



**Enable RS232 Transmit to MX009-Full Speed for
Scanners with Integrated Low Speed USB**



**Disable RS232 Transmit to MX009-Full Speed
for Scanners with Integrated Low Speed USB**



Enable Barcode ID



Disable Barcode ID



Enable USB Reserve Code #1



Disable USB Reserve Code #1



Enable USB Reserve Code #2



Disable USB Reserve Code #2

USB



Sears USB Defaults



Sears Aux Defaults



Enable IBM 1520 Code Flag Emulation - UPC
code ID and ITF code ID remain the same but all other code ID is transmitted as Code 39.



Disable IBM 1520 Code Flag Emulation



Scanner 4B00h Handheld



Scanner 4A00h Flatbed



4A00h/6E00h Scanner/Scale

The following codes only apply to scanners with internal Low-Speed USB interfaces and specific software versions. Please contact a Metrologic representative for additional information on the use and restrictions of these bar codes.



Enable USB Serial Emulation Mode



If the *Recall Defaults* bar code is scanned while reconfiguring the scanner the *USB Serial Emulation Mode* mode will no longer be enabled. It will be necessary to re-scan the *Enable USB Serial Emulation Mode*.



Enable USB Serial Emulation Mode Defaults



* **Enable USB Keyboard Emulation Mode**

CODE BYTES USAGE



The features that use these code bytes for configuration require that the scanner be in *Configuration Mode*. The *Enter/Exit Configuration Mode* bar code (on page 2) must be scanned before starting the configuration cycle.

Example: User configurable prefix/suffix characters can be saved into the scanner by scanning the 3 digit decimal equivalent of the ASCII character into the appropriate character location with the code byte bar codes.

To add an Asterisk (*) as a Prefix scan the following bar codes in order.

1. *Enter/Exit Configuration Mode* (3 beeps)
2. Configurable Prefix #1 (1 beep)
3. Code Byte 0 (1 beep)
4. Code Byte 4 (2 beeps)
5. Code Byte 2 (3 beeps)
6. *Enter/Exit Configuration Mode* (3 beeps)

CODE BYTES 0-9



Code Byte 0



Code Byte 1



Code Byte 2



Code Byte 3



Code Byte 4



Code Byte 5



Code Byte 6



Code Byte 7



Code Byte 8



Code Byte 9

CODE BYTES USAGE

RESERVED CODES



~ **Enable Reserved Code** - Contact Metrologic for information about this feature.



~ **Disable Reserved Code**

CODE TYPE TABLE

| Code Byte | Code Types |
|-----------|----------------------------|
| 004 | UPC-A |
| 002 | UPC-E |
| 003 | EAN-8 |
| 005 | EAN-13 |
| 080 | Code 39 |
| 081 | Codabar |
| 082 | Interleaved 2 of 5 |
| 083 | Code 128 |
| 084 | Code 93 |
| 091 | MSI Plessey |
| 092 | Code 11 |
| 093 | Airline 2 of 5 (15 digits) |
| 094 | Matrix 2 of 5 |
| 095 | Telepen |
| 096 | UK Plessey |
| 099 | TRI-OPTIC |
| 098 | Standard 2 of 5 |
| 097 | Airline (13 digits) |

CODE BYTES USAGE

ASCII REFERENCE TABLE

| HEX Value | Decimal Value/ Code Byte Value | Character | Control Keyboard Eqv |
|-----------|-----------------------------------|-----------|-------------------------|
| 00 | 000 | NUL | @ |
| 01 | 001 | SOH | A |
| 02 | 002 | STX | B |
| 03 | 003 | ETX | C |
| 04 | 004 | EOT | D |
| 05 | 005 | ENQ | E |
| 06 | 006 | ACK | F |
| 07 | 007 | BEL | G |
| 08 | 008 | BS | H |
| 09 | 009 | HT | I |
| 0A | 010 | LF | J |
| 0B | 011 | VT | K |
| 0C | 012 | FF | L |
| 0D | 013 | CR | M |
| 0E | 014 | SO | N |
| 0F | 015 | SI | O |
| 10 | 016 | DLE | P |
| 11 | 017 | DC1 | Q |
| 12 | 018 | DC2 | R |
| 13 | 019 | DC3 | S |
| 14 | 020 | DC4 | T |
| 15 | 021 | NAK | U |
| 16 | 022 | SYN | V |
| 17 | 023 | ETB | W |
| 18 | 024 | CAN | X |
| 19 | 025 | EM | Y |
| 1A | 026 | SUB | Z |
| 1B | 027 | ESC | [|
| 1C | 028 | FS | \ |

CODE BYTES USAGE

ASCII REFERENCE TABLE

| HEX Value | Decimal Value/ Code Byte Value | Character | Control Keyboard Eqv |
|-----------|-----------------------------------|-----------|-------------------------|
| 1D | 029 | GS | ^ |
| 1E | 030 | RS | _ |
| 1F | 031 | US | space,blank |
| 20 | 032 | SP | |
| 21 | 033 | ! | |
| 22 | 034 | " | |
| 23 | 035 | # | |
| 24 | 036 | \$ | |
| 25 | 037 | % | |
| 26 | 038 | & | |
| 27 | 039 | ' | apostrophe |
| 28 | 040 | (| |
| 29 | 041 |) | |
| 2A | 042 | * | |
| 2B | 043 | + | |
| 2C | 044 | , | comma |
| 2D | 045 | - | minus |
| 2E | 046 | . | period |
| 2F | 047 | / | |
| 30 | 048 | 0 | number zero |
| 31 | 049 | 1 | number one |
| 32 | 050 | 2 | |
| 33 | 051 | 3 | |
| 34 | 052 | 4 | |
| 35 | 053 | 5 | |
| 36 | 054 | 6 | |
| 37 | 055 | 7 | |
| 38 | 056 | 8 | |
| 39 | 057 | 9 | |
| 3A | 058 | : | |
| 3B | 059 | ; | |

CODE BYTES USAGE

ASCII REFERENCE TABLE

| HEX Value | Decimal Value/ Code Byte Value | Character | Control Keyboard Eqv |
|-----------|-----------------------------------|-----------|-------------------------|
| 3C | 060 | < | less than |
| 3D | 061 | = | |
| 3E | 062 | > | greater than |
| 3F | 063 | ? | |
| 40 | 064 | @ | shift P |
| 41 | 065 | A | |
| 42 | 066 | B | |
| 43 | 067 | C | |
| 44 | 068 | D | |
| 45 | 069 | E | |
| 46 | 070 | F | |
| 47 | 071 | G | |
| 48 | 072 | H | |
| 49 | 073 | I | letter I |
| 4A | 074 | J | |
| 4B | 075 | K | |
| 4C | 076 | L | |
| 4D | 077 | M | |
| 4E | 078 | N | |
| 4F | 079 | O | letter O |
| 50 | 080 | P | |
| 51 | 081 | Q | |
| 52 | 082 | R | |
| 53 | 083 | S | |
| 54 | 084 | T | |
| 55 | 085 | U | |
| 56 | 086 | V | |
| 57 | 087 | W | |
| 58 | 088 | X | |
| 59 | 089 | Y | |

CODE BYTES USAGE

ASCII REFERENCE TABLE

| HEX Value | Decimal Value/ Code Byte Value | Character | Control Keyboard Eqv |
|-----------|-----------------------------------|-----------|-------------------------|
| 5A | 090 | Z | |
| 5B | 091 | [| shift K |
| 5C | 092 | \ | shift L |
| 5D | 093 |] | shift M |
| 5E | 094 | ^ | à,shift N |
| 5F | 095 | _ | ♣, shift O, underscore |
| 60 | 096 | ‘ | accent grave |
| 61 | 097 | a | |
| 62 | 098 | b | |
| 63 | 099 | c | |
| 64 | 100 | d | |
| 65 | 101 | e | |
| 66 | 102 | f | |
| 67 | 103 | g | |
| 68 | 104 | h | |
| 69 | 105 | l | |
| 6A | 106 | j | |
| 6B | 107 | k | |
| 6C | 108 | l | |
| 6D | 109 | m | |
| 6E | 110 | n | |
| 6F | 111 | o | |
| 70 | 112 | p | |
| 71 | 113 | q | |
| 72 | 114 | r | |
| 73 | 115 | s | |
| 74 | 116 | t | |
| 75 | 117 | u | |
| 76 | 118 | v | |
| 77 | 119 | w | |
| 78 | 120 | x | |

CODE BYTES USAGE

ASCII REFERENCE TABLE

| HEX Value | Decimal Value/ Code Byte Value | Character | Control Keyboard Eqv |
|-----------|-----------------------------------|-----------|-------------------------|
| 79 | 121 | y | |
| 7A | 122 | z | |
| 7B | 123 | { | |
| 7C | 124 | | vertical slash |
| 7D | 125 | } | alt mode |
| 7E | 126 | ~ | (alt mode) |
| 7F | 127 | DEL | delete, rubout |

EXTENDED KEY CODE REFERENCE TABLE

| Key | At Scan Code | PS2 Scan Code | 3151 | Prefix/Suffix Value Hex = Decimal |
|----------------------|-----------------|------------------|------|--------------------------------------|
| ↑ | 75H | 48H | 63H | 80H = 128 |
| ↓ | 72H | 50H | 60H | 81H = 129 |
| → | 74H | 4DH | 6AH | 82H = 130 |
| ← | 6BH | 4BH | 61H | 83H = 131 |
| Insert | 70H | 52H | 67H | 84H = 132 |
| Delete | 71H | 53H | 64H | 85H = 133 |
| Home | 6CH | 47H | 6EH | 86H = 134 |
| End | 69H | 4FH | 00H | 87H = 135 |
| Page Up | 7DH | 49H | 00H | 88H = 136 |
| Page Down | 7AH | 51H | 00H | 89H = 137 |
| Right Alt | 11H | 38H | 00H | 8AH = 138 |
| Right Ctrl | 14H | 1DH | 39H | 8BH = 139 |
| Reserved | 00H | 00H | 00H | 8CH = 140 |
| Reserved | 00H | 00H | 00H | 8DH = 141 |
| Numeric Keypad Enter | 5AH | 1CH | 79H | 8EH = 142 |
| Numeric Keypad/ | 4AH | 35H | 00H | 8FH = 143 |
| F1 | 05H | 3BH | 07H | 90H = 144 |
| F2 | 06H | 3CH | 0FH | 91H = 145 |
| F3 | 04H | 3DH | 17H | 92H = 146 |
| F4 | 0CH | 3EH | 1FH | 93H = 147 |
| F5 | 03H | 3FH | 27H | 94H = 148 |
| F6 | 0BH | 40H | 2FH | 95H = 149 |
| F7 | 83H | 41H | 37H | 96H = 150 |

CODE BYTES USAGE

EXTENDED KEY CODE REFERENCE TABLE

| Key | At Scan Code | PS2 Scan Code | 3151 | Prefix/Suffix Value Hex = Decimal |
|--------------------------|--------------|---------------|------|--------------------------------------|
| F8 | 0AH | 42H | 3FH | 97H = 151 |
| F9 | 01H | 43H | 47H | 98H = 152 |
| F10 | 09H | 44H | 4FH | 99H = 153 |
| F11 | 78H | 57H | 56H | 9AH = 154 |
| F12 | 07H | 58H | 5EH | 9BH = 155 |
| Numeric + | 79H | 4EH | 00H | 9CH = 156 |
| Numeric - | 7BH | 4AH | 7CH | 9DH = 157 |
| Numeric * | 7CH | 37H | 00H | 9EH = 158 |
| Caps Lock | 58H | 3AH | 14H | 9FH = 159 |
| Num Lock | 77H | 45H | 00H | A0H = 160 |
| Left alt | 11H | 38H | 00H | A1H = 161 |
| Left Ctrl | 14H | 1DH | 11H | A2H = 162 |
| Left Shift | 12H | 2AH | 12H | A3H = 163 |
| Right Shift | 59H | 36H | 59H | A4H = 164 |
| Print Screen | Multiple | 00H | 00H | A5H = 165 |
| Tab | ODH | OFH | 0DH | A6H = 166 |
| Shift Tab | 8DH | 8FH | 65H | A7H = 167 |
| Enter | 5AH | 1CH | 5AH | A8H = 168 |
| ESC | 76H | 01H | 08H | A9H = 169 |
| Left ALT Make | 11H | 36H | 00H | AAH = 170 |
| Left ALT Break | 11H | B6H | 00H | ABH = 171 |
| Left CTRL Make | 14H | 1DH | 00H | ACH = 172 |
| Left CTRL Break | 14H | 9DH | 00H | ADH = 173 |
| *Left ALT + 1 character | 11H | 36H | 00H | AEH = 174 |
| *Left Ctrl + 1 character | 14H | 1DH | 00H | AFH = 175 |
| *Send | | | 58H | C0H = 192 |
| Clear | | | 6FH | C1H = 193 |
| Jump | | | 76H | C2H = 194 |
| Send Line | | | 7EH | C3H = 195 |
| Erase EOF | | | 6DH | C4H = 196 |
| Send - Make Only | | | 58H | C5H = 197 |

*Example:

1st Configurable Prefix = 174

2nd Configurable Prefix = 065

Scanner will transmit <left ALT Make> "A" <Left ALT Break>

MS9520 VOYAGER® & MS9540 VOYAGERCG® SERIES

ACTIVATION RANGE

Use these bar codes to select infrared (IR) sensor activation range for sensing when objects are placed in the scan field.



* **Long Range in Stand**



Short Range in Stand



* **Long Range Out of Stand**



Short Range Out of Stand

CODEGATE STATUS

Use the following bar codes to control button functions.

Note: The following functions are not supported by all versions of the MS5145.



CodeGate Active in Stand



* **CodeGate Inactive in Stand**



* **CodeGate Active Out of Stand**



CodeGate Inactive Out of Stand

LASER/SCAN MODES



* **Normal Scan** - Laser turns on after the IR senses a bar code. The laser remains on for approximately 3 to 10 seconds.



Blinky Scan - Laser turns on after the IR senses a bar code. The laser will blink on/off for approximately 60 seconds.



Continuous Blinky Scan - The laser blinks continuously and the IR is inactive. *This feature is not available for the VoyagerPDF series.*

MS9520 VOYAGER® & MS9540 VOYAGERCG® SERIES

LASER/SCAN MODES



Custom (One Shot) Scan - The laser turns on after a good decode.



Enable Manual Activation Mode - The laser activates when the CodeGate button is pressed.



* **Normal Timeout (Button Act)**



0.5 Second Timeout (Button Act)

SAME SYMBOL TIME OUTS

If using an MS5145 Eclipse, the MS9524 or MS9544 VoyagerPDF, please go to page 27.



No Same Symbol Time Out



1000 msec Same Symbol Time Out



* **875 msec Same Symbol Time Out**



750 msec Same Symbol Time Out



625 msec Same Symbol Time Out



500 msec Same Symbol Time Out



375 msec Same Symbol Time Out



250 msec Same Symbol Time Out



Infinite Same Symbol Time Out

MS9524 & MS9544 VOYAGERPDF® SERIES



* **Enable PDF**



Disable PDF



* **Enable Audible Indicator**



Disable Audible Indicator



Enable PDF CodeGate in Stand



* **Disable PDF CodeGate in Stand**



Enable PDF CodeGate Out of Stand



* **Disable PDF CodeGate Out of Stand**



Enable Fun Tones - Scan this bar code then scan an *Optional Tone* bar code (on page 28).



* **Disable Fun Tones**

MICROPDF AND COMPOSITE CODE HANDLING



Enable MicroPDF - Allows composite symbologies to be scanned (PDF 417 is enabled by default).



* **Disable MicroPDF**

MS9524 & MS9544 VOYAGERPDF® SERIES



- * **Enable RSS 2D Linkage** - Transmits the 1D RSS with out scanning the 2D portion.

Disable RSS 2D Linkage



Enable UPC/EAN Linkage - Link UPC/EAN symbols with a 2D composite constituent then transmit.



- * **Disable UPC/EAN Linkage**



- * **Enable Code 128 Linkage** - Transmit the 1D Code 128 without scanning the 2D portion.

Disable Code 128 Linkage



- * **Enable PDF 1D Linkage** - Transmit the 2D portion of the PDF-417 w/o scanning the 1D portion.

Disable PDF 1D Linkage



- * **Enable UPDF 1D Linkage** - Transmit the 2D portion of microPDF w/o scanning the 1D portion.

Disable UPDF 1D Linkage



- * **Normal Composite Xmit** - Always transmit the 1D and 2D constituent composite components separately.

Xmit Composite Separately - Transmit the 1D and 2D constituent composite components separately.



Enable EAN-128 Emulation - Utilize the UCC/EAN128 protocol for transmission purposes.



- * **Disable EAN-128 Emulation**



For Same Symbol Time Out information please refer to page 27.

MS9535 VOYAGERBT™

Get Bluetooth Address



Configures the VoyagerBT to get a Bluetooth address.

- If the next scanned bar code consists of 12 characters, the scanner will remember the code and establish a Bluetooth connection.
- If the bar code scanned is *not* 12 characters, the scanner will ignore the scan and get a Bluetooth address. The bar code will then need to be re-scanned.

Provide Bluetooth Service



Configures the VoyagerBT to act as a server so that other devices using the Bluetooth technology will be able to initiate a connection to the VoyagerBT.



Sleep in 1 Minute - The scanner will go into sleep (power save) mode after the laser has been off for 1 minute.



Sleep in 2 Minutes - The scanner will go into sleep mode after the laser has been off for 2 minutes.



Sleep in 5 Minutes - The scanner will go into sleep mode after the laser has been off for 5 minutes.



Sleep in 10 Minutes - The scanner will go into sleep mode after the laser has been off for 10 minutes.



* **Enable Scanning in Cradle**



Disable Scanning in Cradle

MS9535 VOYAGERBT™



Enable Bluetooth Test - The cradle will display certain connection information (KO, OK, etc.)



Do not enable this feature unless instructed to by a Metrologic representative.



*** Disable Bluetooth® Test**



Enable Range Gate - Store scanned barcodes into RAM if the Bluetooth connection has been interrupted.



*** Disable Range Gate**



Enable Bluetooth Address Transmission



Enable Bluetooth Software Version Transmission



Enable In Stand Error Audio Indicator –
Activates an audible indicator the when Bluetooth scanner is in-the-stand/charging cradle but is not making contact via the battery terminal contacts.



*** Disable In Stand Error Indicator**



*** Enable Cradle LED**



Disable Cradle LED

MS9535-5M VOYAGERBT™



Enable Inventory Mode – Bar code data that is scanned is stored in the scanner's expanded memory base. The data will be transmitted when the scanner is placed back into its Bluetooth cradle.



A special beep will sound when a bar code is scanned but **not** stored due to a full a memory base. The scanner must be placed in the Bluetooth cradle to empty the memory.



* **Disable Inventory Mode**



* **Auto Cradle Transmit** - All bar code data is automatically transmitted when the scanner is placed into the Bluetooth cradle.



No Cradle Transmit - The scanner will **not** automatically transmit bar code data when placed in the Bluetooth cradle.



* **Transmit Inventory FIFO** - Data is transmitted on a first-in, first-out basis.



Transmit Inventory LIFO - Data is transmitted on a last-in, first-out basis.



Enable Inventory Beep - A beep will sound as each bar code is transmitted. A special audible indicator will sound on completion of data transfer.



* **Disable Inventory Beep**



* **No Transmit/Entry Counter**



Transmit/Entry Counter - Optional field transmitted with the bar code data that is a count of the number of transmissions used to transmit the entire buffer.

MS9535-5M VOYAGERBT™



Clear Inventory Records - Will clear all stored bar code data in memory.



Delete Last Record - Deletes the last bar code stored. .

When the *Transmit Quantity Field* has been enabled, each scanned quantity code is a unique field. If the *delete last record* bar code is scanned it will remove the last quantity code scanned.

Example: If a quantity of 103 (Quantity 1, Quantity 0, and Quantity 3) was scanned but a quantity of 10 was desired.

1. Scan the *delete last record* bar code.
 2. The **Quantity 3** code will be deleted and a quantity of **10** will be stored.
-



Transmit All Records - Transmits all stored data records.



Transmit Record Counters - Will transmit the number of records and the number of bar codes currently stored as a 5-digit number separated by a space.



Transmit Quantity Field - Adds an additional quantity field for the last item (bar code) scanned. Once enabled the user is able to enter a numerical quantity from 1 to 9999 for the last item (bar code) scanned (see Inventory Quantity Bar Codes on page 85).



* **Don't Transmit Quantity Field**

MS9535-5M VOYAGERBT™

INVENTORY QUANTITY BAR CODES**

The following inventory quantity bar codes will enable the user to enter a quantity from 1 to 9999 for the last item (bar code) scanned. The item's bar code data will be retransmitted as many times as the *quantity* indicates.

Example:

1. Scan the item's bar code (ie. ABCD)
2. Scan the **Quantity 1** bar code
3. Scan the **Quantity 0** bar code
4. The ABCD bar code will be transmitted **10** times



Quantity 0



Quantity 1



Quantity 2



Quantity 3



Quantity 4



Quantity 5



Quantity 6



Quantity 7



Quantity 8



Quantity 9

** Transmit Quantity Field must be enabled (on page 84) for this feature.

IS4125 / IS4225 SCAN ENGINES



Disable Old Serial Program



Enable Old Serial Program



Enable TTL UART



Enable Non Buffered TTL UART



Enable Detect and Notify Mode



Cunningham Defaults - Scan this code followed by *Recall Defaults* code to enable and load Cunningham defaults.



Recall Defaults

For Same Symbol Time Out information please refer to page 78.

MISCELLANEOUS FEATURES

CUSTOM DEFAULTS

Metrologic manufactures several scanners for OEM applications. These scanners may use a different set of defaults than Metrologic factory defaults. Scanning the bar code will reset the default table to Metrologic defaults.



Enable Factory Defaults - Scan this code followed by *Recall Defaults* code to enable and load Metrologic factory defaults.



Recall Defaults



Ruby Verifone Defaults - Scan this code followed by *Recall Defaults* code to enable and load Ruby Verifone defaults.



RCH - Scan this code followed by *Recall Defaults* code to enable and load RCH defaults.



Sanyo - Scan this code followed by *Recall Defaults* code to enable and load Sanyo defaults.



Gilbarco - Scan this code followed by *Recall Defaults* code to enable and load Gilbarco defaults.



ALT Defaults - Scan this code followed by *Recall Defaults* code to enable and load Alt defaults.



LaCaixa Custom Keyboard Defaults - Scan this code followed by *Recall Defaults* code to enable and load LaCaixa defaults.



ABACAB Defaults - Scan this code followed by *Recall Defaults* code to enable and load ABACAB defaults.

MISCELLANEOUS FEATURES

SERIAL PROGRAM MODE

For Serial Program Mode, all commands must be framed by an STX (02 Hex) and ETX (03 Hex).

To recall defaults:

1. Transmit <STX>999999<ETX> through the Serial Port. This will put the scanner in serial program mode. Scanning will be suspended and the scanner will respond with an ACK (06 Hex).
2. Transmit <STX>999998<ETX> through the Serial Port. This is the Recall Defaults bar code in the MetroSelect guide. The scanner will respond with an ACK (06 Hex).
3. Transmit <STX>999999<ETX> through the Serial Port. This will cause the scanner to exit program mode and save the new settings. The scanner will beep 3 times and send an ACK (06 Hex).

If at anytime, the scanner cannot recognize a command, it will respond with a NAK (15 Hex). Please refer to the Installation and User's Guide of the scanner for a complete description of Serial Program Mode.

OFFICE LOCATIONS AND CONTACT INFORMATION

CORPORATE HEADQUARTERS

NORTH AMERICA

USA, New Jersey

Metrologic Instruments, Inc.
Tel: 1-800-ID-METRO Fax: 856-228-6673
Email: info@metrologic.com

SOUTH AMERICA AND CENTRAL AMERICA

Brazil São Paulo

Metrologic do Brasil Ltda.
Tel: 55-11-5182-8226 Fax: 55-11-5182-8315
Email: info@br.metrologic.com

Outside Brazil São Paulo

Metrologic South America
Tel: 55-11-5182-7273 Fax: 55-11-5182-7198
Email: info@sa.metrologic.com

ASIAN HEADQUARTERS

Asia, Singapore

Metrologic Asia (Pte) Ltd
Tel: (65) 6842-7155 Fax: (65) 6842-7166
Email: info@sg.metrologic.com

China

MTLG Auto ID Instruments (Shanghai) Co., Ltd
Tel: 86-2158692780 Fax: 86-21-58692782
Email: info@cn.metrologic.com

Metro (Suzhou) Sales Office
Tel: 86-512-67622550 Fax: 86-512-67622560
Email: info@cn.metrologic.com

Guangzhou Sales Office
Tel: 86-20-38823476 Fax: 86-20-38823477
Email: info@cn.metrologic.com

Beijing Sales Office
Tel/Fax: 86 10 82253472
Email: info@cn.metrologic.com

Japan, Tokyo

Metrologic Japan Co., Ltd.
Tel: 81-03-3839-8511 Fax: 81-03-3839-8519
Email: info@jp.metrologic.com

India, Bangalore

Metrologic India
Tel: +91 80 51256718 Fax: +91 80 51256719
Email: info@in.metrologic.com

EUROPEAN, MIDDLE EAST & AFRICAN HEADQUARTERS

Germany, Munich

Metrologic Instruments GmbH
Tel: 49-89-89019-0 Fax: 49-89-89019-200
Email: info@europe.metrologic.com

Germany, Austria and Switzerland

Tel: 49-89-89019-0 Fax: 49-89-89019-200
Email: info@de.metrologic.com

Eastern Europe and Middle East

Tel: 49-89-89019-222 Fax: 49-89-89019-173

Italy, Bologna

Metrologic Instruments Italia srl
Tel: +39 0 51 6511978 Fax: +39 0 51 6521337
Email: info@it.metrologic.com

France, Paris

Metrologic Eria France SA
Tel: +33 (0) 1 48.63.78.78
Fax: +33 (0) 1 48.63.24.94
Email: info@fr.metrologic.com

Spain, Madrid

Metrologic Eria Ibérica, SL
Tel: +34 913 272 400 Fax: +34 913 273 829
Email: info@es.metrologic.com

Metrologic European Repair Center (MERC)

Metrologic Eria Ibérica, SL
Tel: +34 913 751 249 Fax: +34 913 270 437

United Kingdom, Basingstoke

Metrologic Instruments UK Limited
Tel: +44 (0) 1256 365900
Fax: +44 (0) 1256 365955
Email: info@uk.metrologic.com

Russia, Moscow

Metrologic Russia
Tel: +7 095 730 7424 Fax: +7 095 730 7425
Email: info@ru.metrologic.com

Poland, Warsaw

Metrologic Instruments Poland Sp.z o.o
Tel: +48 (22) 545 04 30
Fax: +48 (22) 545 04 31
Email: info@pl.metrologic.com

May 2005

Printed in the USA



00 - 02544F