


Wireless 802.11g Access Point

Quick Install

1

Getting Connected

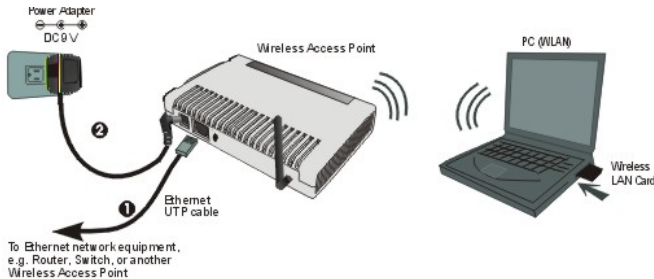

- 1 Connect to your local area network:**
Connect an Ethernet cable to the Ethernet port of this Wireless Access Point, and the other end to a hub, switch, router, or another wireless access point.
- 2 Power on the device:**
Connect the included AC power adapter to the Wireless Access Point's power port and the other end to a wall outlet.
- 3 Check the LED:**
The **Power**, **Wireless Link/Act.** and **LAN** should be **ON**. **Wireless Link/Act.** and **LAN** will blink if the data is being transmitted or received.

Configure your PC:

Make sure your local PC(s) has wireless network adapter installed.

In order to use the Access Point, other Wireless devices must use **the same SSID** and **WEP settings** as the Wireless Access Point.

The Wireless Access Point's default settings are as follows:

Setting	Wireless Access Point
Device Name	Wireless AP
SSID	Default value: 802.11SSID
Channel	6
WEP	Default value: Disabled
IP Address	192.168.1. 252

2

Manual Configuration

You can manually configure this Access Point via a wireless or wired connection.

1

Wireless

1. For wireless station, make sure your computer has associated with this Access Point.
2. Skip to step 2

Wired

1. Start your computer. Connect an Ethernet cable between your computer and the Wireless Access Point.
2. Make sure your wired station is set to the same subnet mask as the Wireless Access Point, i.e. 192.168.1.10

2

Start your WEB browser.

3

In the *Address* box, enter the following:

[HTTP://192.168.1.252](http://192.168.1.252)

Address

4

On the login page, enter default user name "**Admin**" and leave the password blank to log in.



The main menu appears. Please refer to the user manual saved on the CD-ROM for detail.

